

Triumph Tiger 800

Tom Tom Sat Nav Mount

Installation Instructions

Installation Instructions




Kit Contents PRN014503-014567


- (A) 1 x Main Plate
- (B) 1 x Pivot Plate
- © 1 x Sub Mounting Bracket
- © 2 x M5 x 8mm Black Button Head Bolts

 © 2 x Lobe Screw
- © 2 x Locking Washer
- © 2 x P-clips (No.1)
- H 2 x P-clips (No.2)
- 1 2 x P-clips (No.3)
- ① 2 x P-clips (No.4)
- K 2 x M5 Black Washer

- L 2 x M4 x 5mm Black Button Head Bolts
- M 4 x M5 x 12mm Black Button Head Bolts
 - Sub Kit
 - N 2 x M5 x 25mm Black Button head Bolts
 - © 2 x Nylon Washers




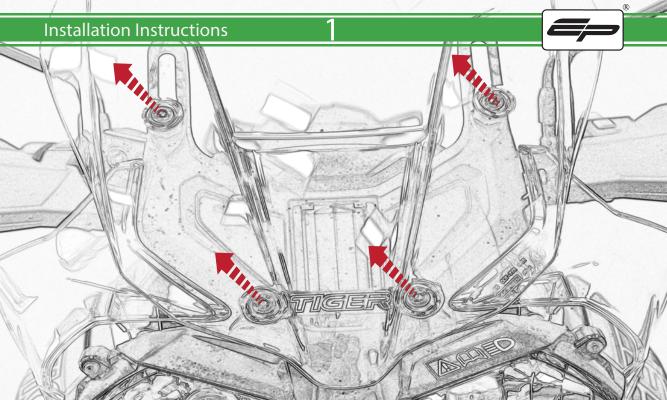

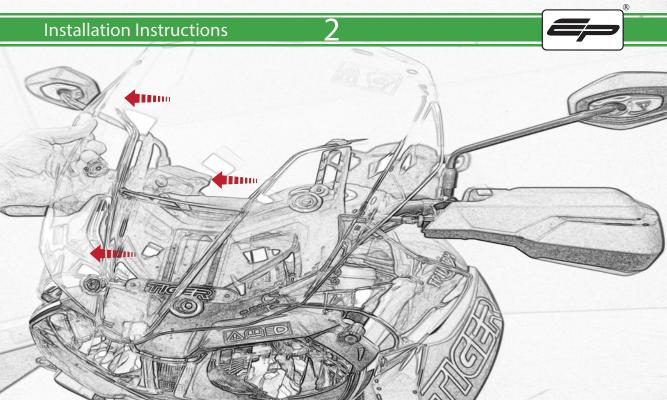


3




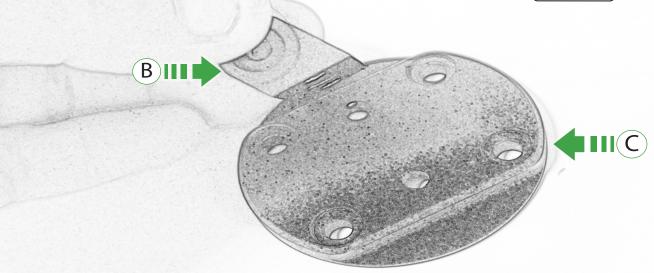








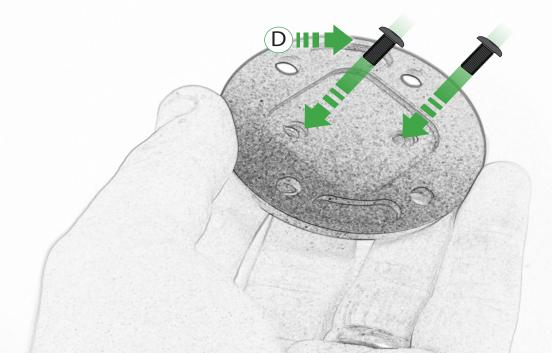


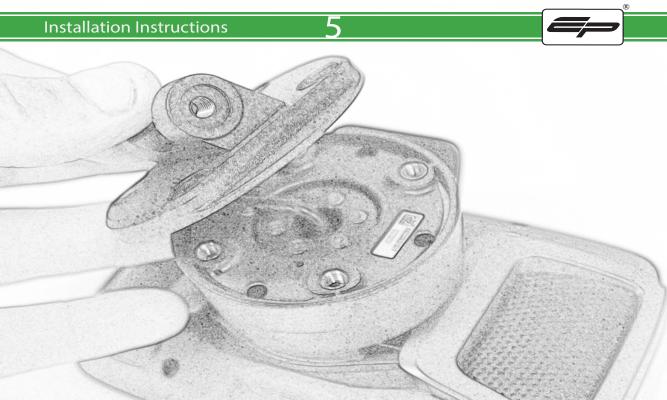


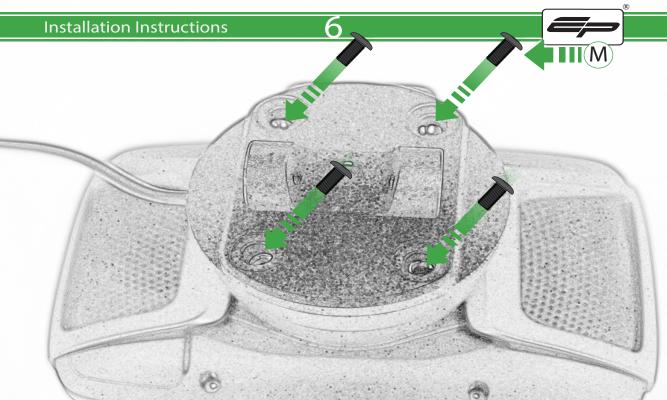


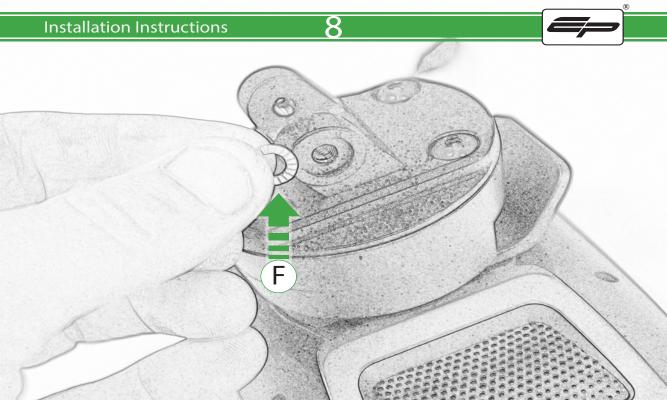


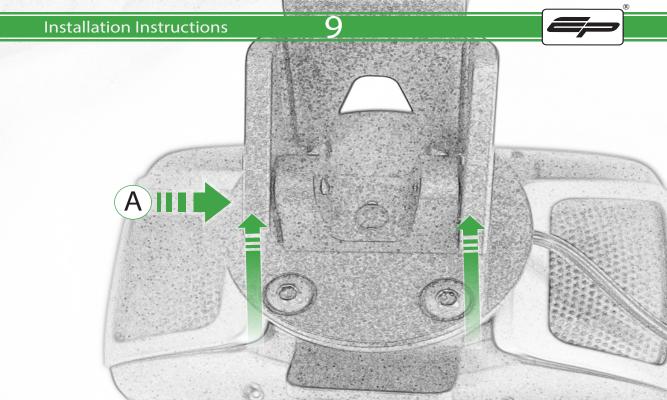


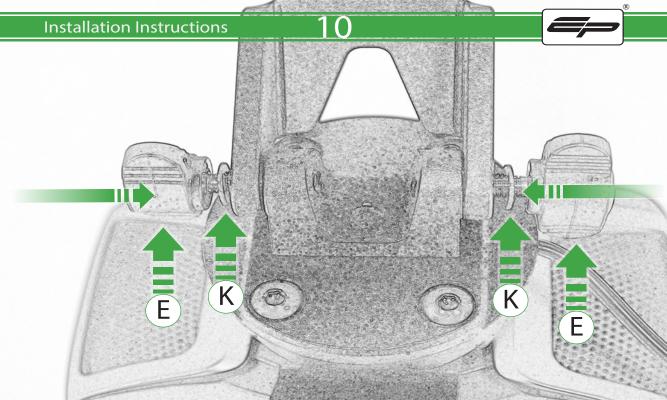


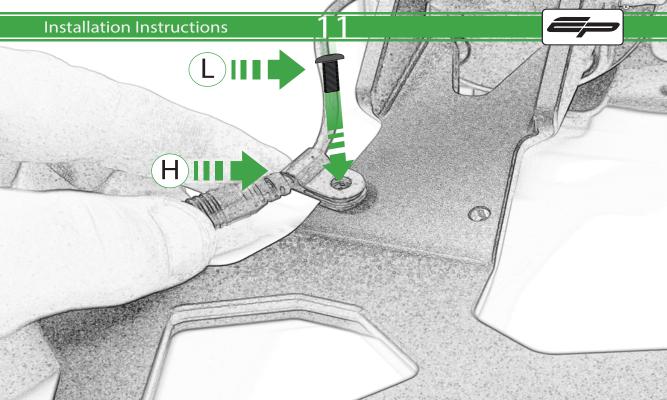

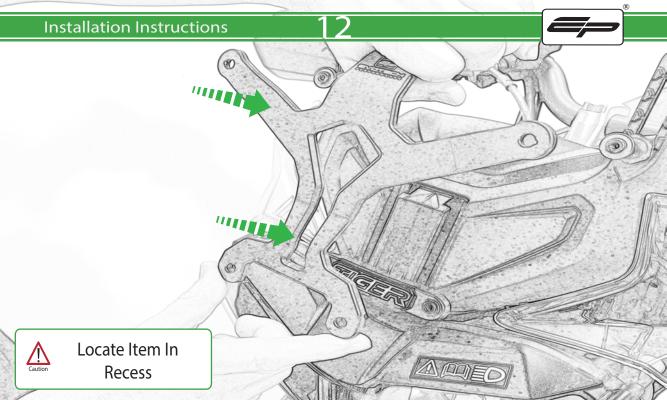

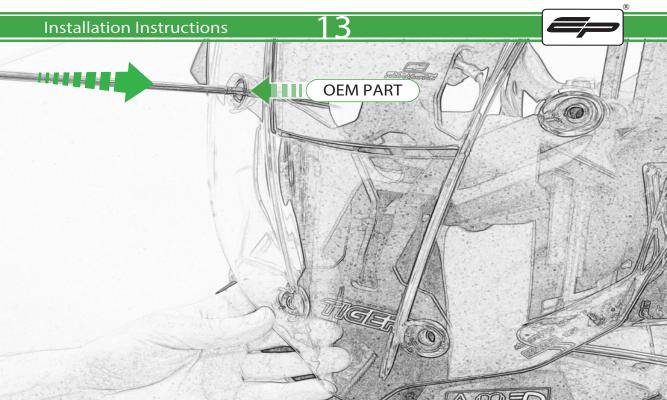

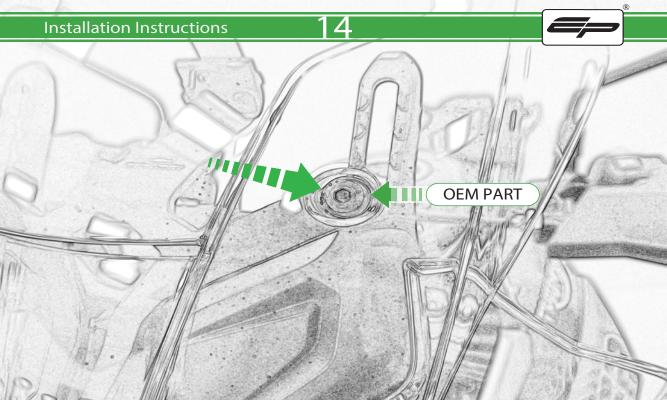

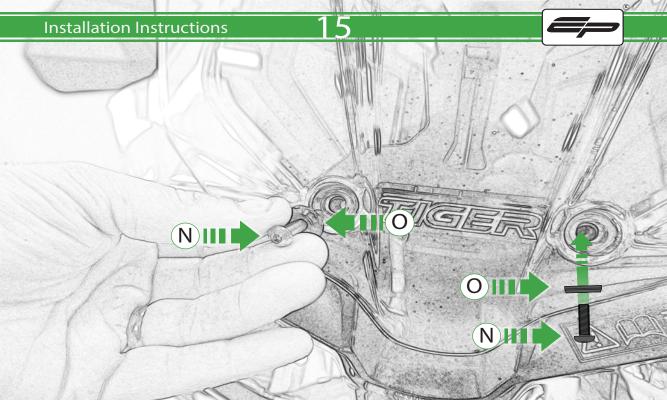





It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com