



**EVOTECH**<sup>®</sup>  
P E R F O R M A N C E


Honda CB650R  
Crash Protection


Installation Instructions




## Kit Contents PRN014292

- Ⓐ 1 x M12 x 120 x 1.25 Caphead Bolt
- Ⓑ 1 x M12 x 90 x 1.25 Caphead Bolt
- Ⓒ 1 x Long Spacer (L/H)
- Ⓓ 1 x Short Spacer (R/H)
- Ⓔ 2 x Large Bobbin Head
- Ⓕ 2 x Washer M12 BZP
- Ⓖ 2 x Polyurathane Washer

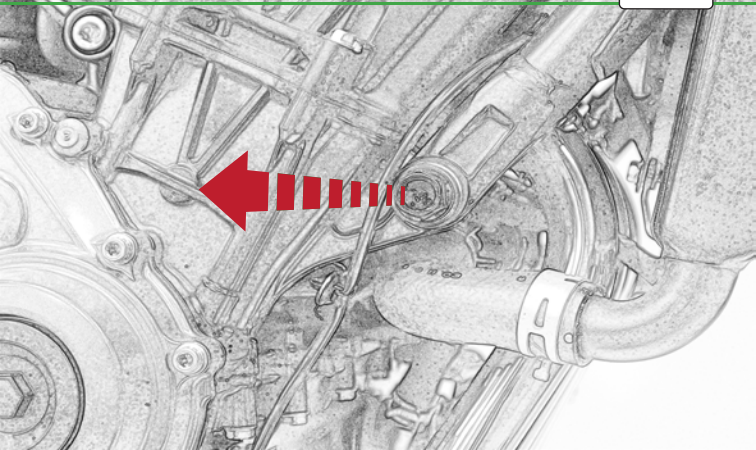


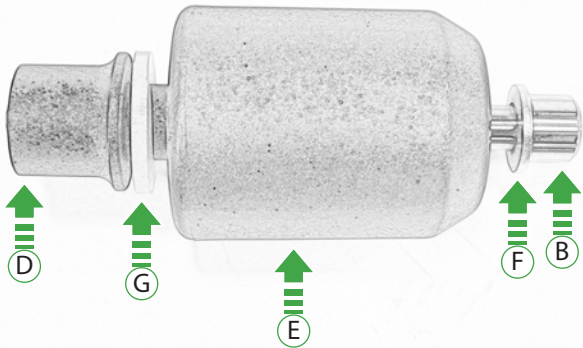


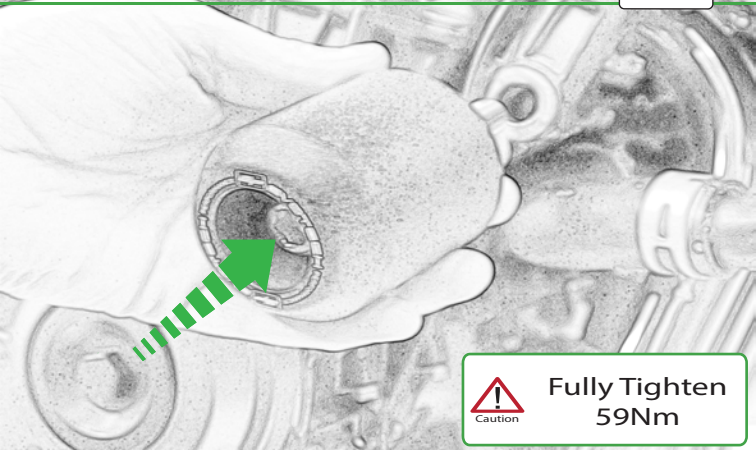

Caution

Fully Tighten  
59Nm

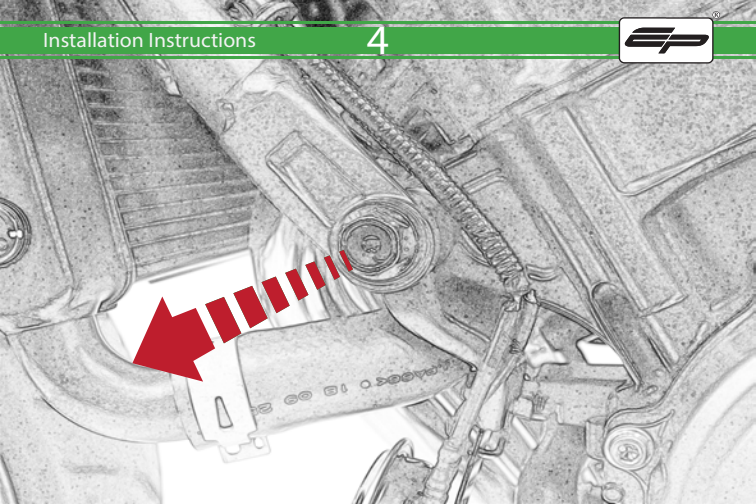

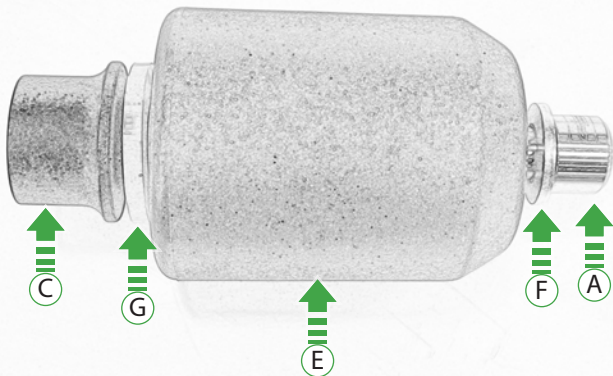







Caution

Fully Tighten  
59Nm



 **ESSENTIAL CHECKS** 

It is recommended that periodic inspections are made to ensure that all bolts are tightened to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced



**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)