

**EVOTECH**®  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)


Kawasaki Z H2 Tail Tidy  
Installation Instructions




## Kit Contents PRN013818


- (A) 1 x Upper Bracket
- (B) 1 x Lower Bracket
- (C) 1 x Base Plate
- (D) 1 x Number Plate Bracket
- (E) 1 x Retro Light
- (F) 1 x Loom Connector 5 or 19
- (G) 2 x M6 Flange Nut
- (H) 2 x M4 Flange Nut
- (I) 2 x M4 x 6 Black Button Head Bolts
- (J) 2 x M4 Black Washers
- (K) 3 x M5 x 12 Countersunk Screws
- (L) 4 x M6 Black Washers
- (M) 6 x M6 x 16 Black Button Head Bolts



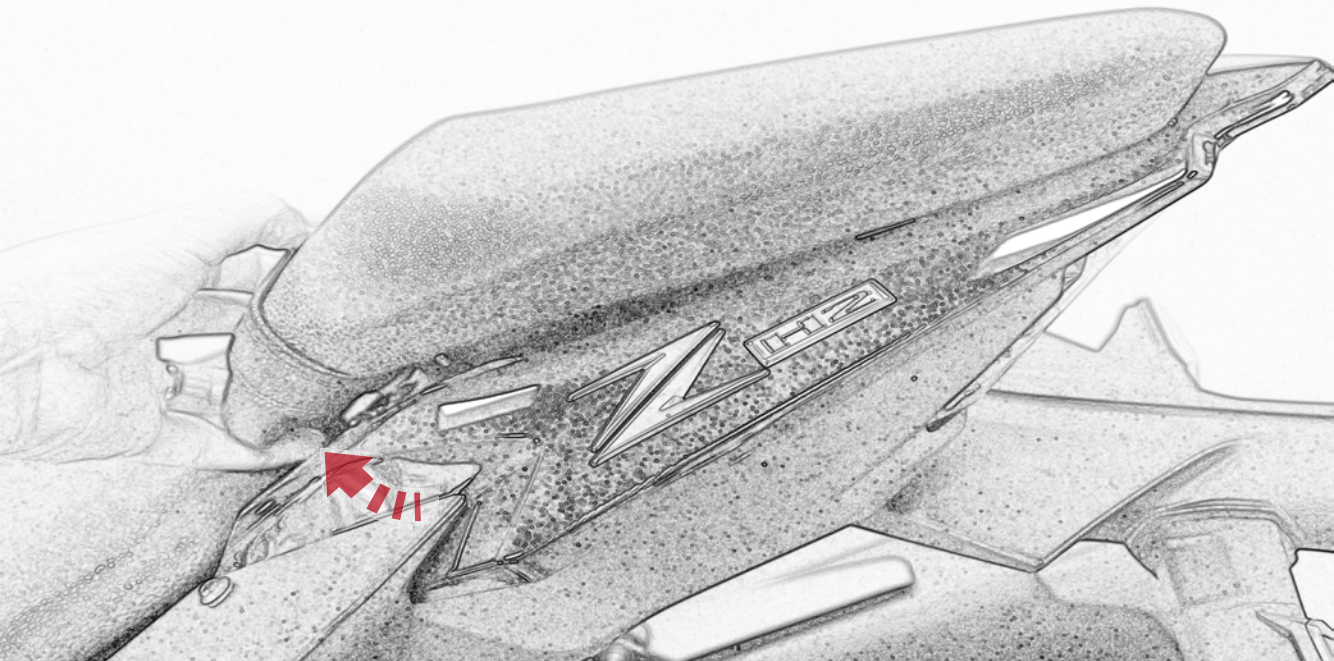




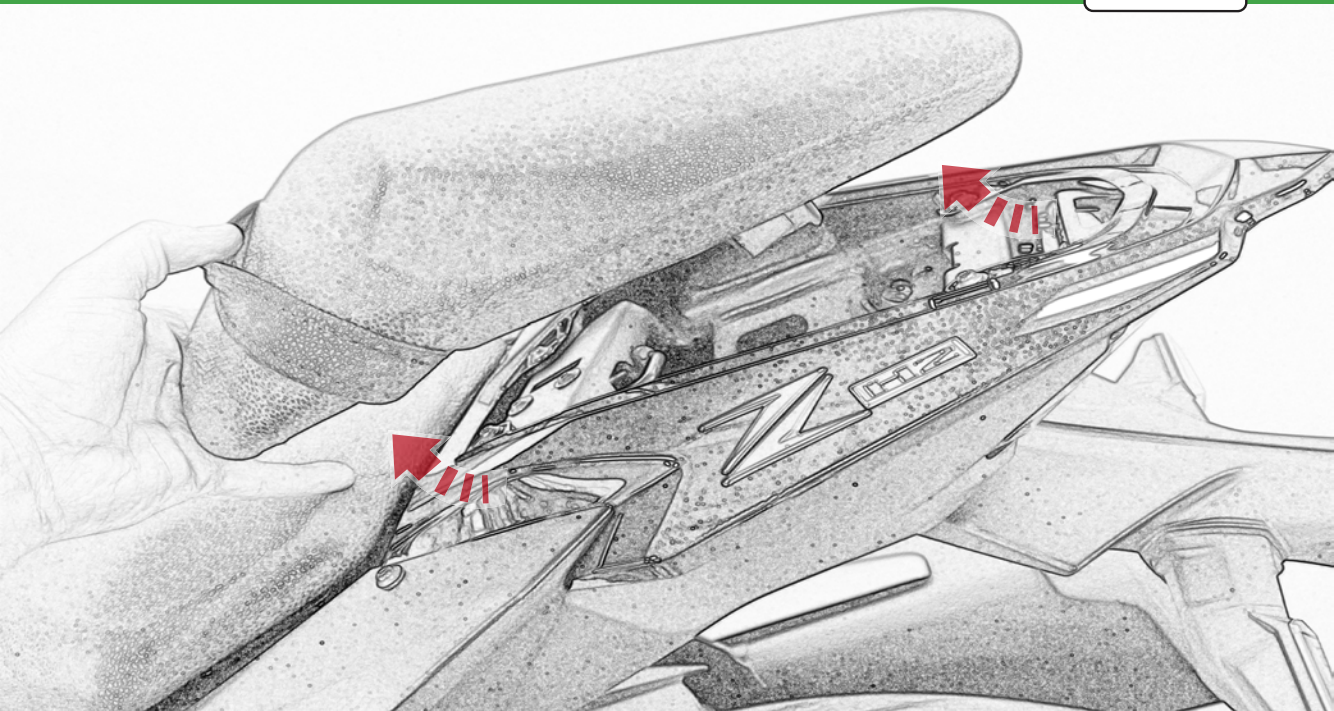


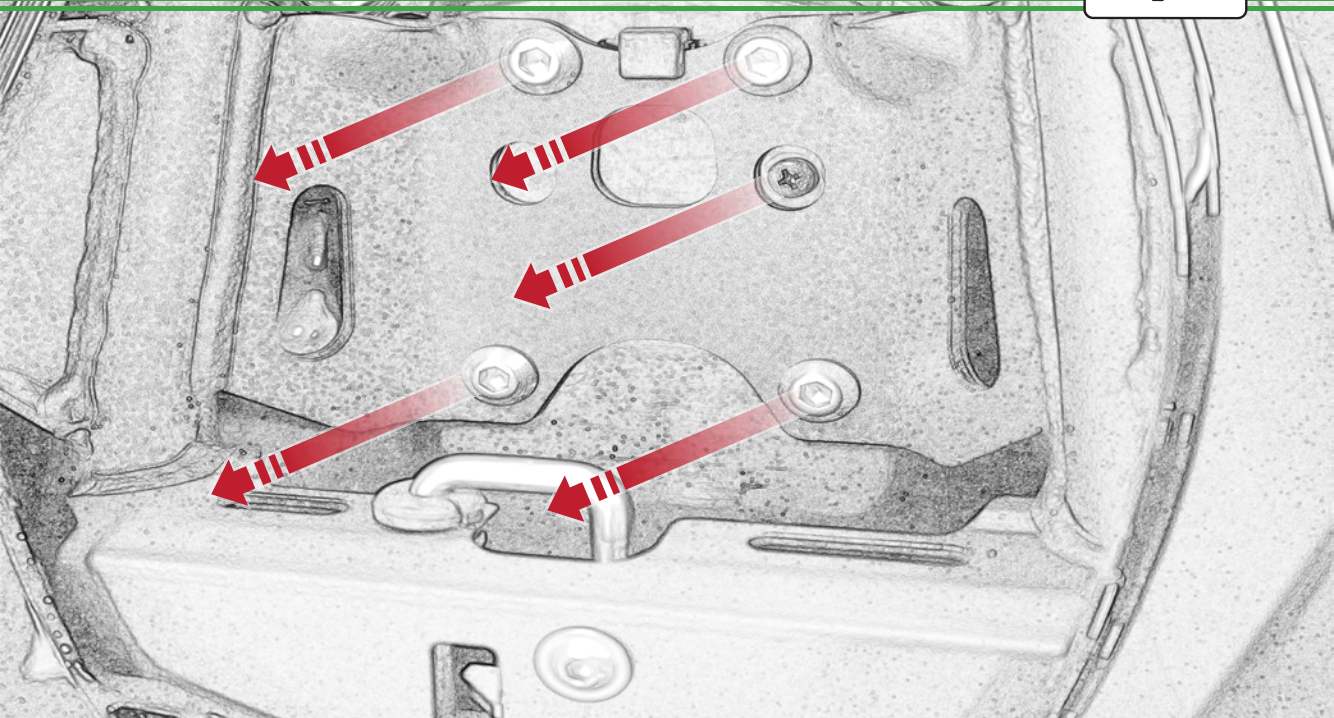






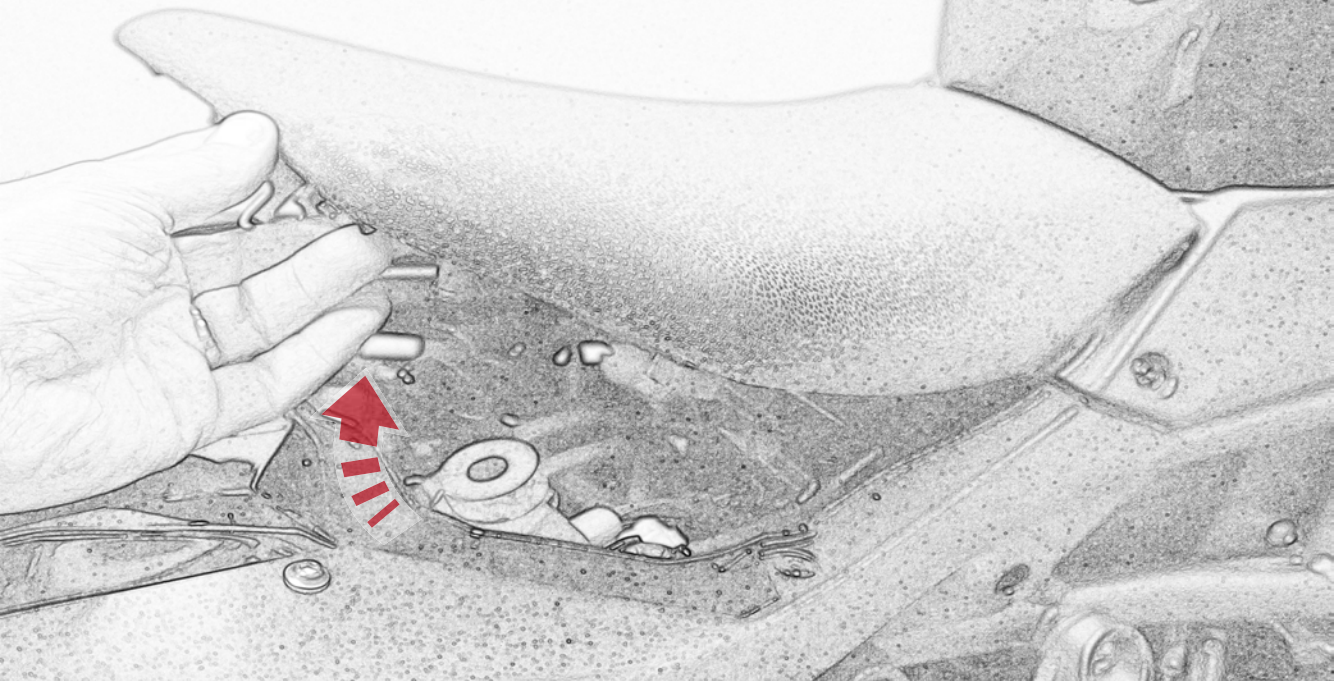

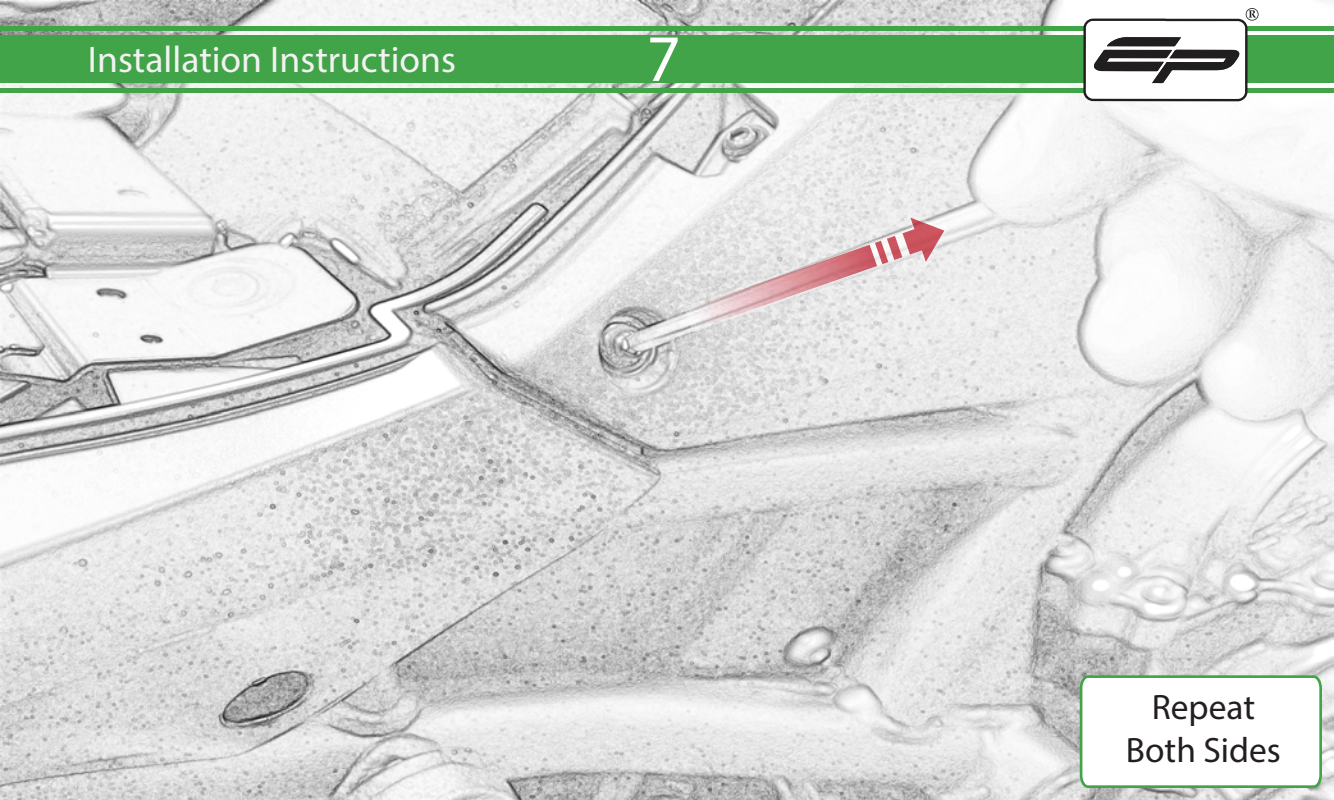

Repeat  
Both Sides

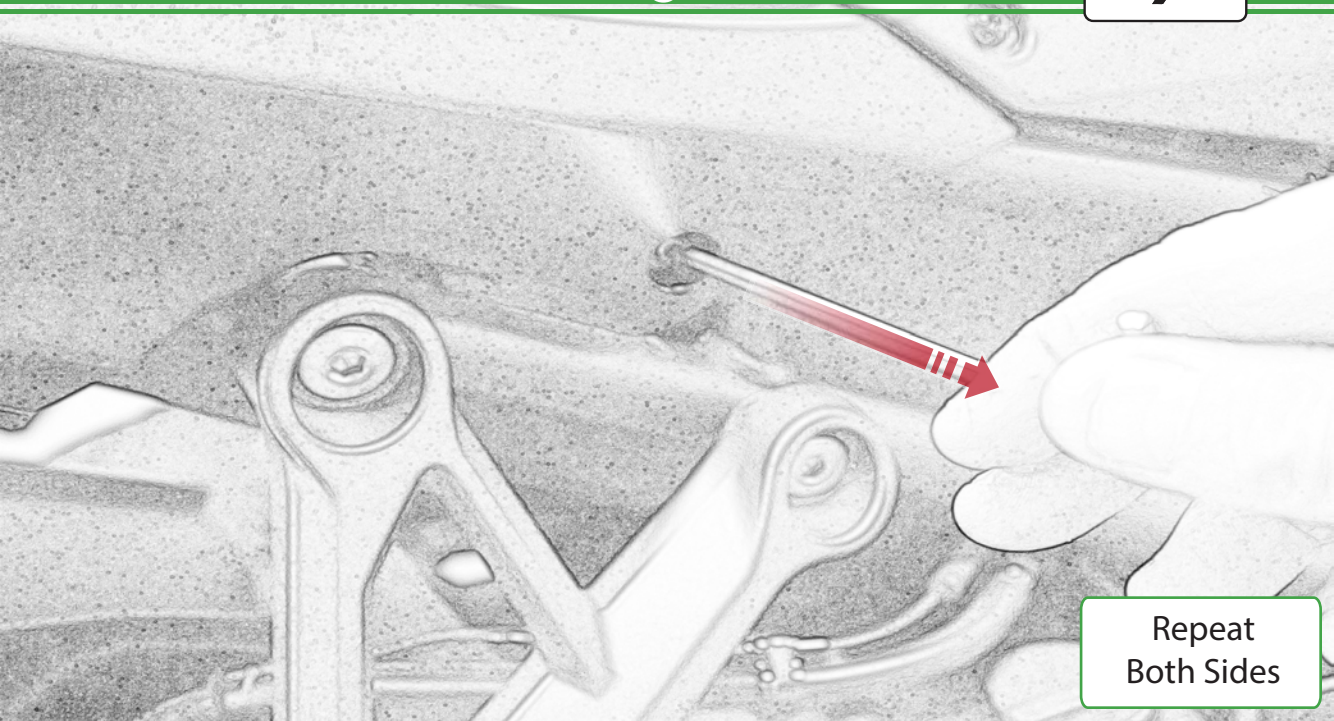

Repeat  
Both Sides



9



RELEASE



RE-SET




RE-FIT



Repeat  
Both Sides



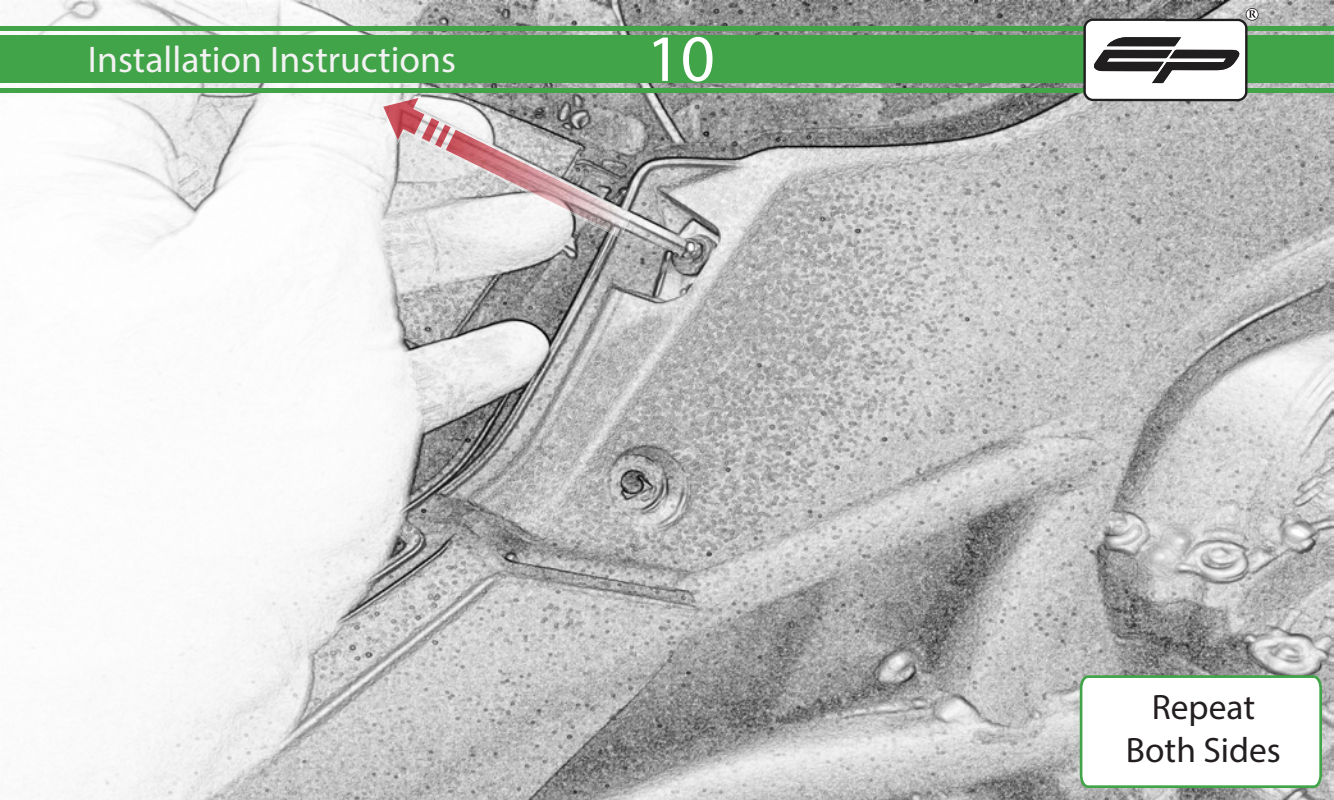

Repeat  
Both Sides



Repeat  
Both Sides




Repeat  
Both Sides







13




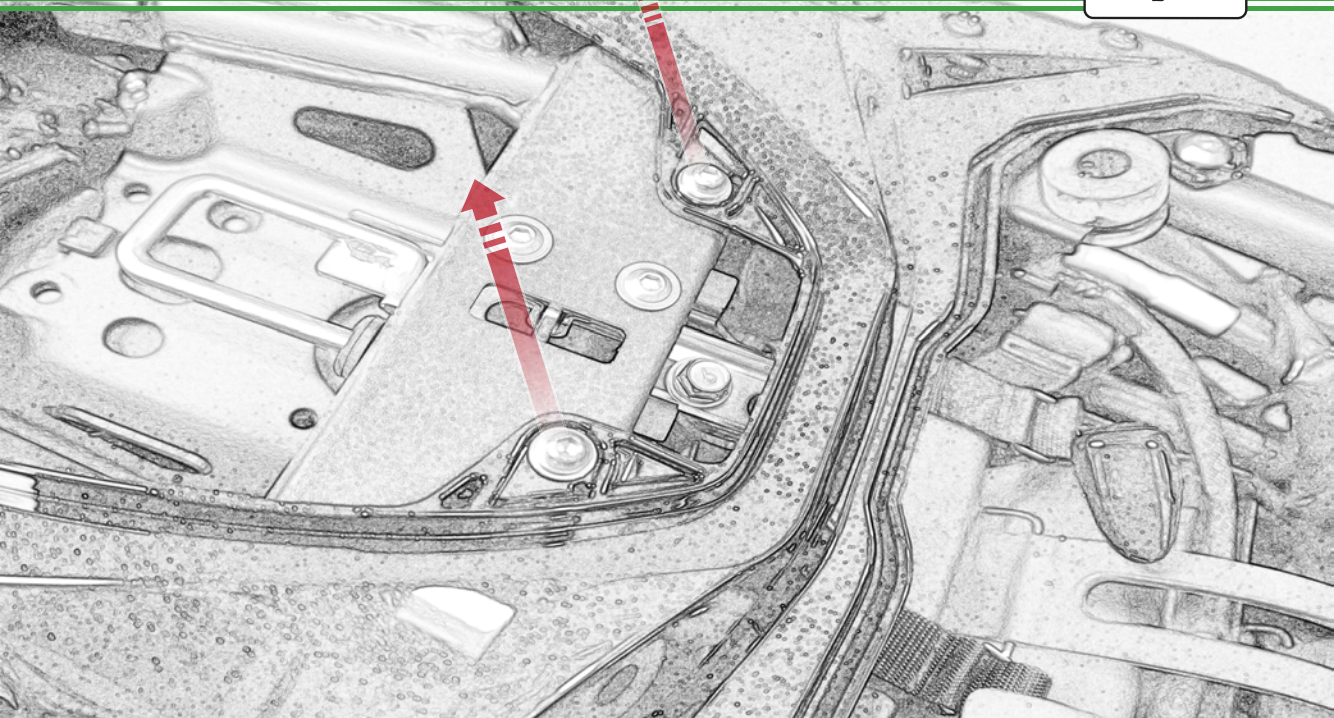



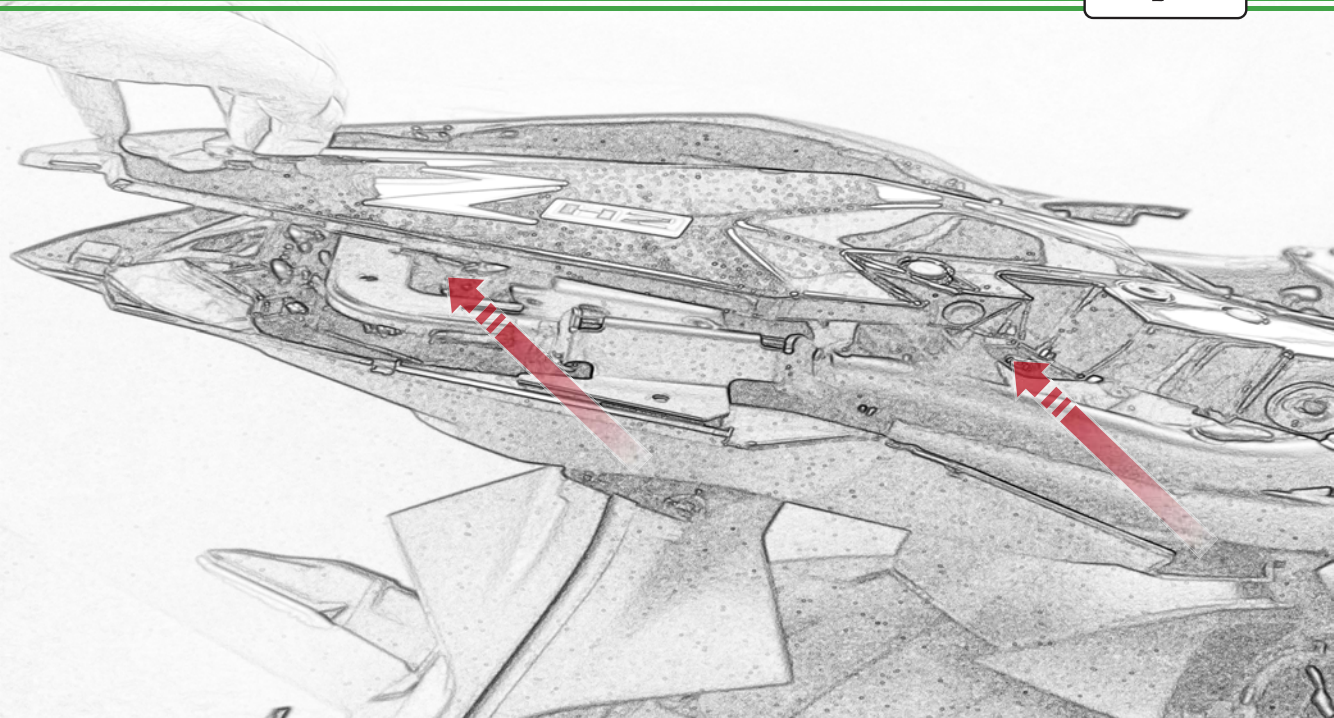





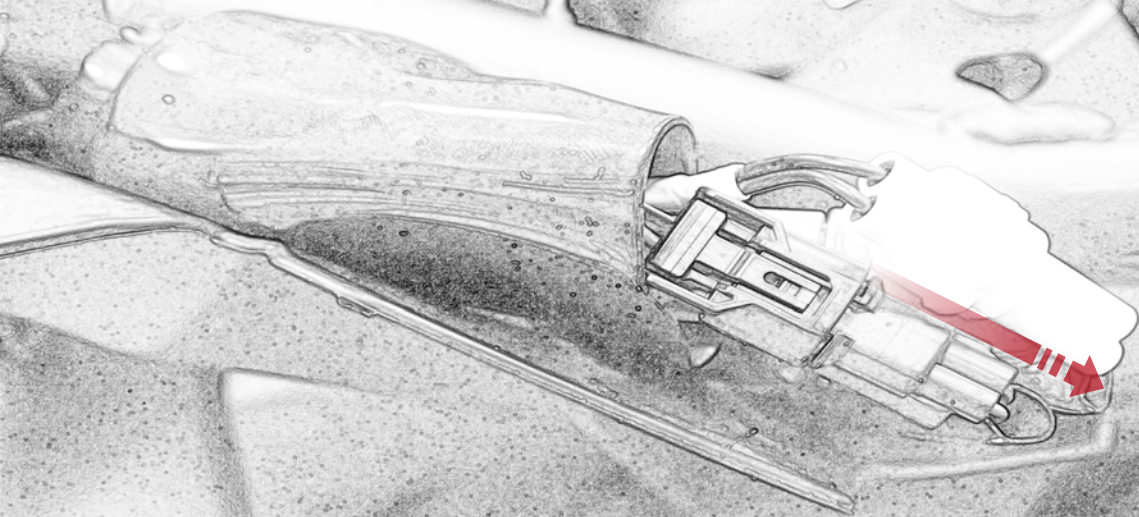



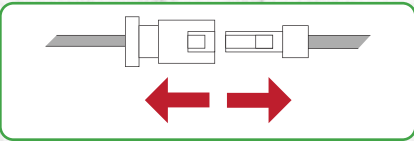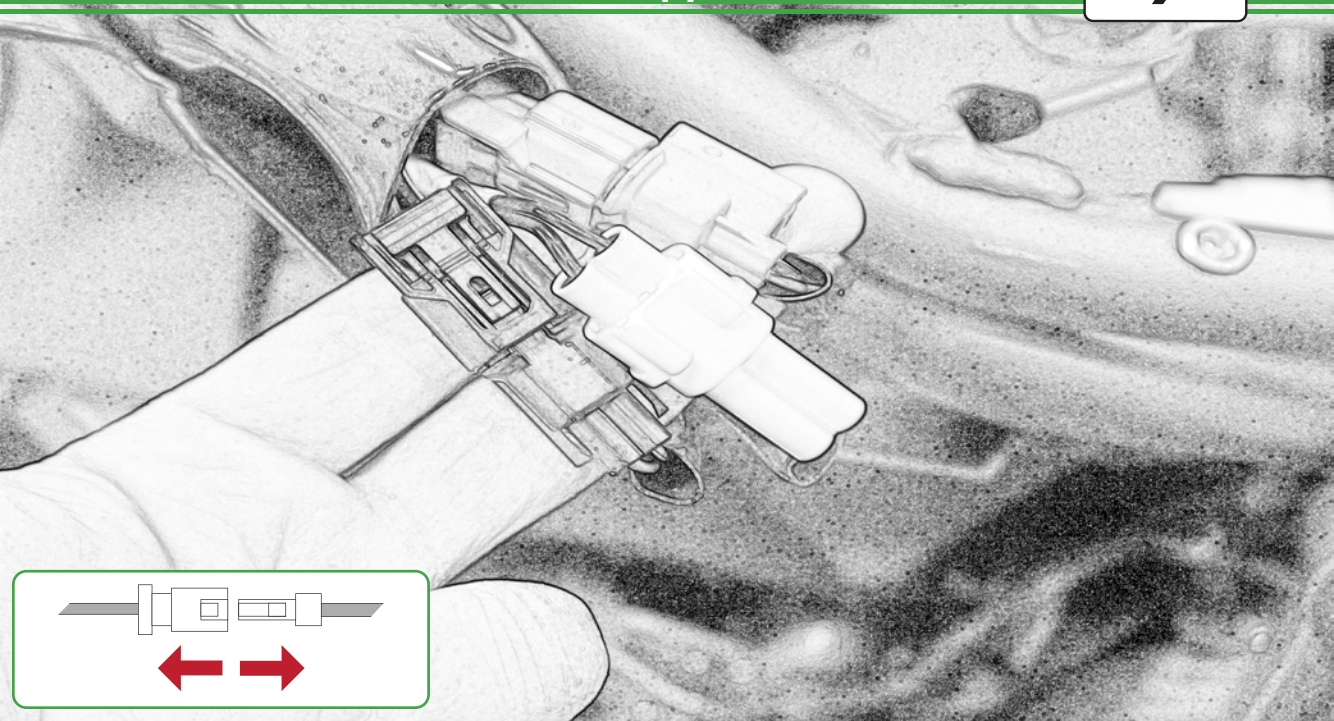


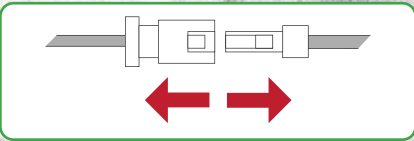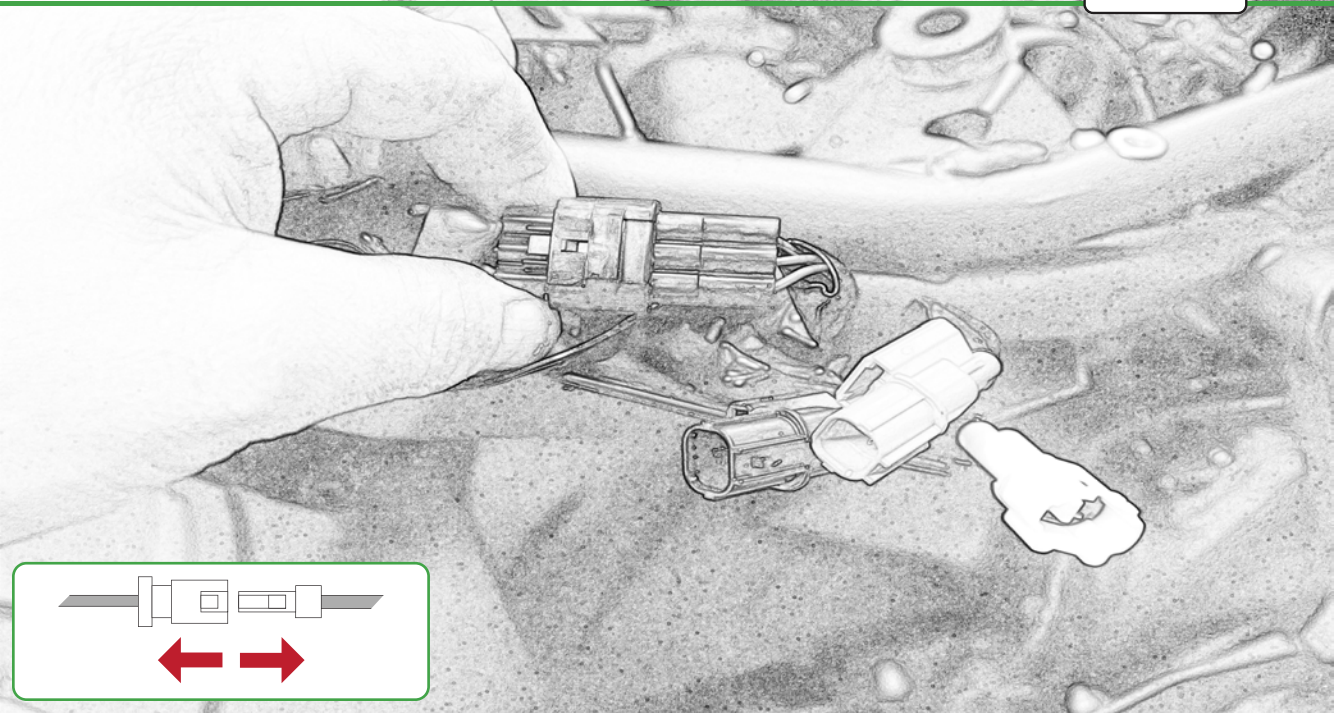


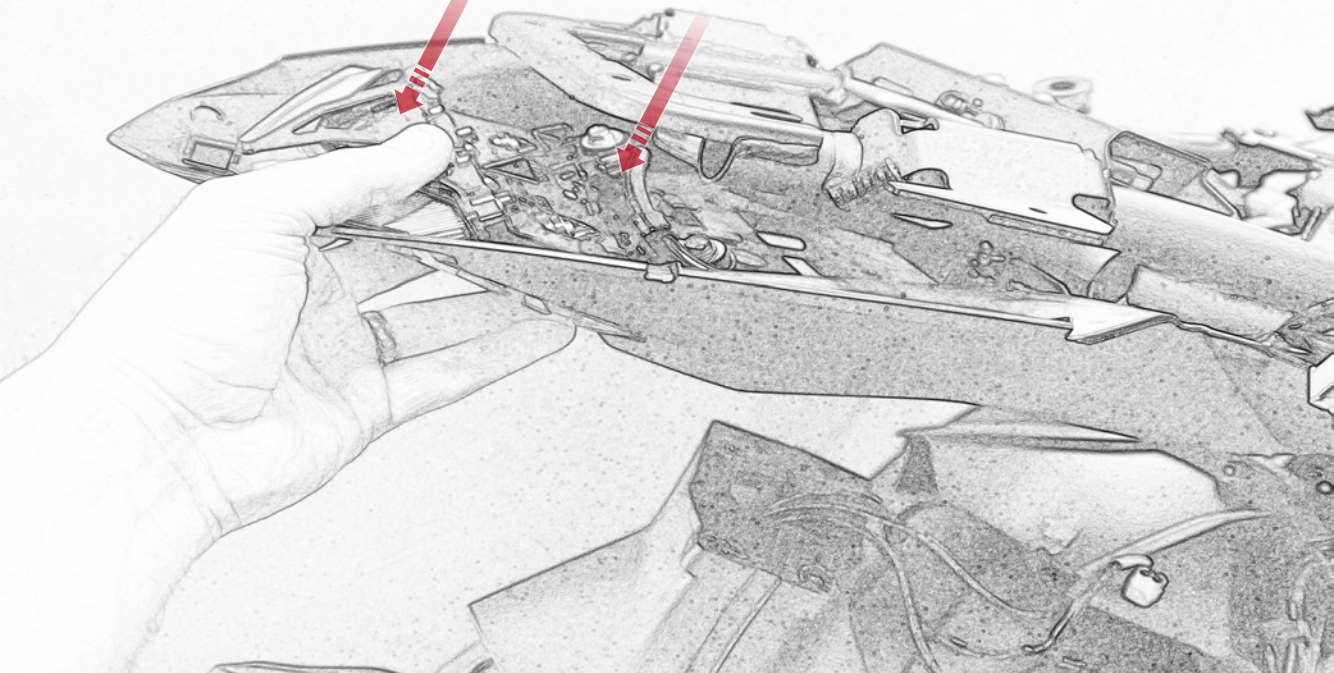







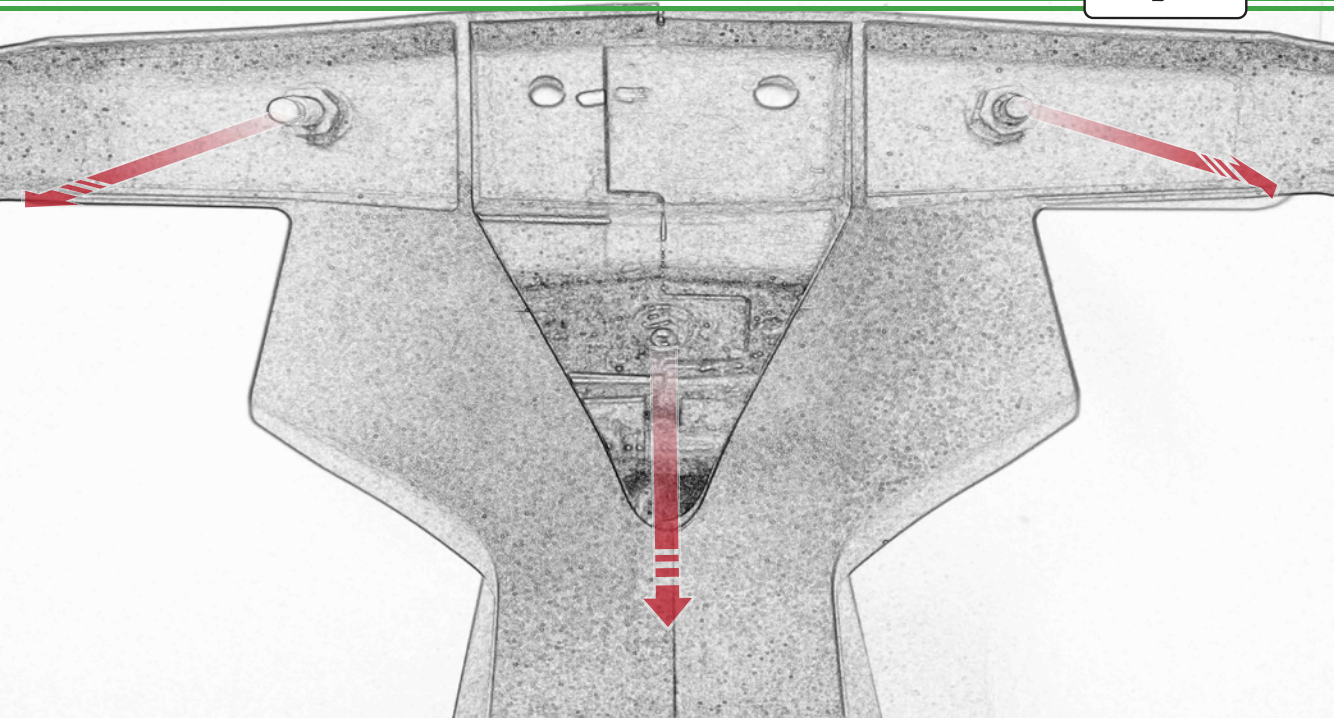

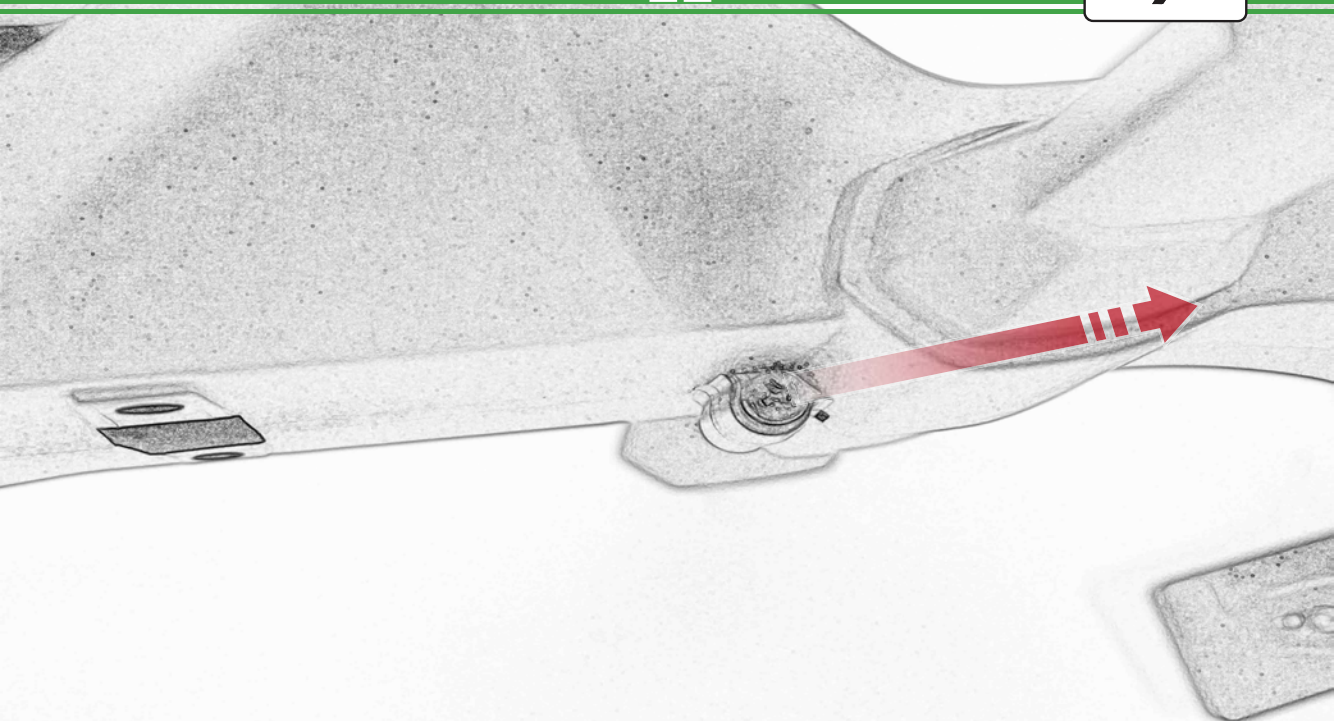


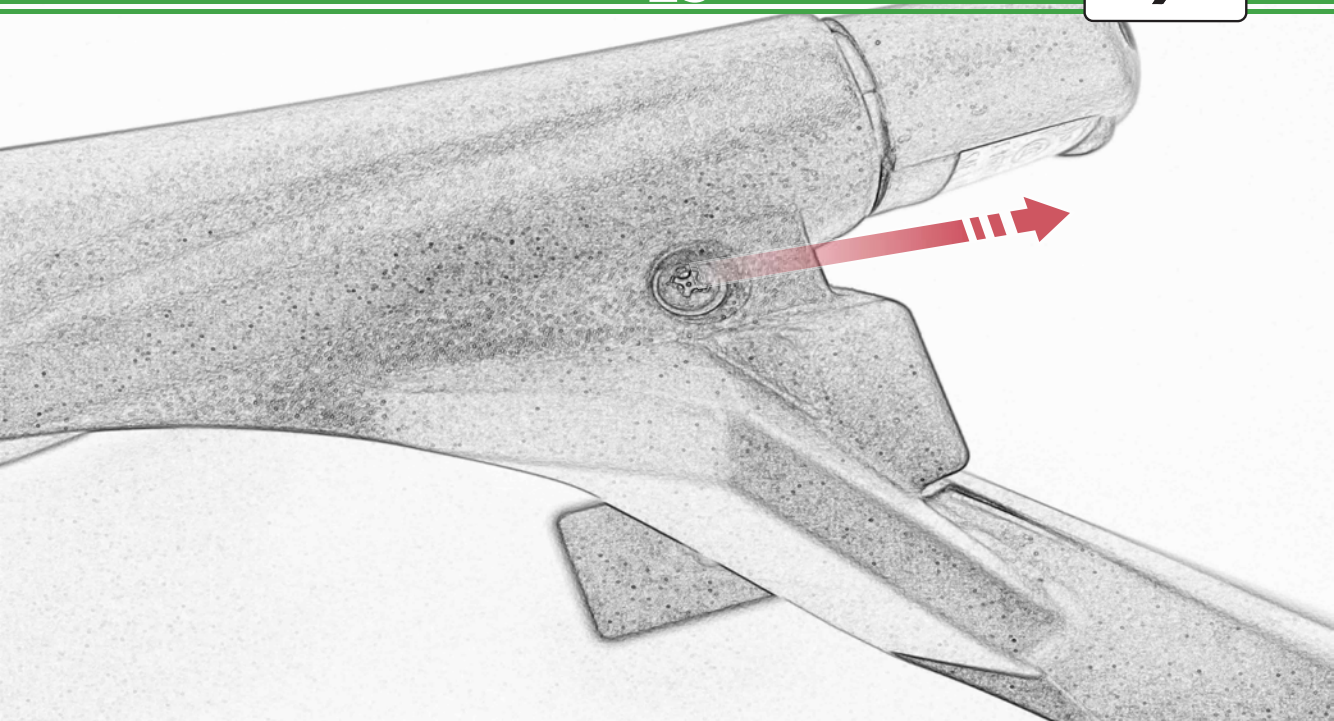




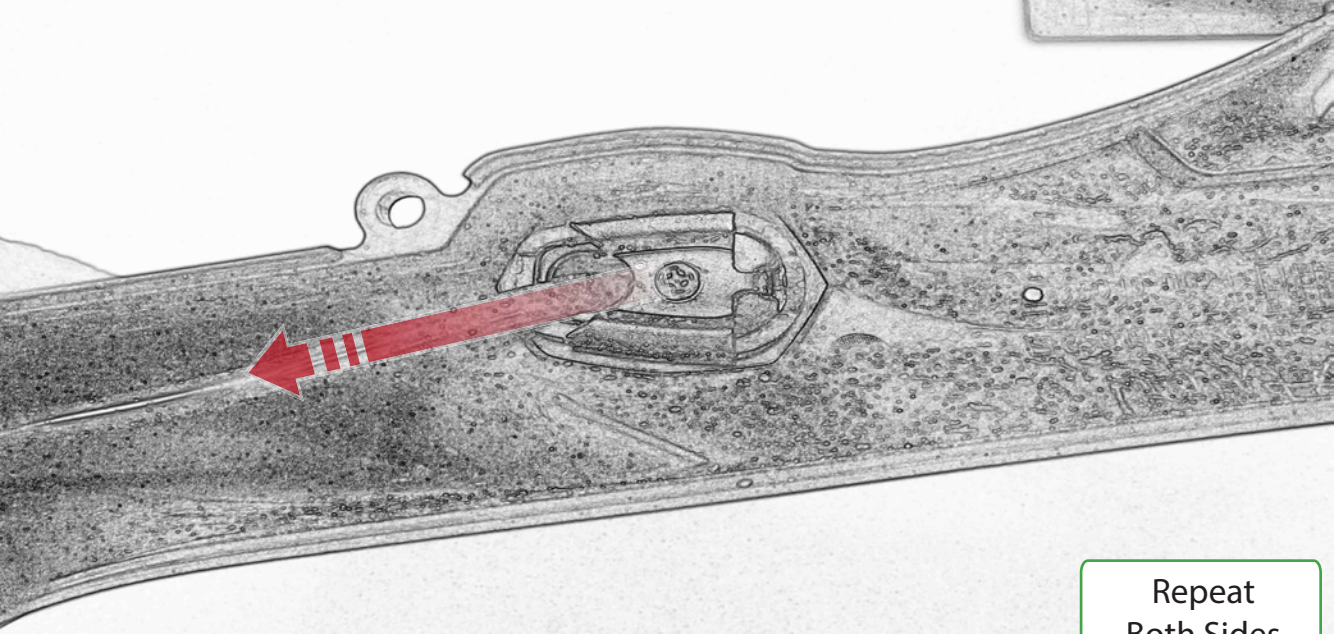


Repeat  
Both Sides

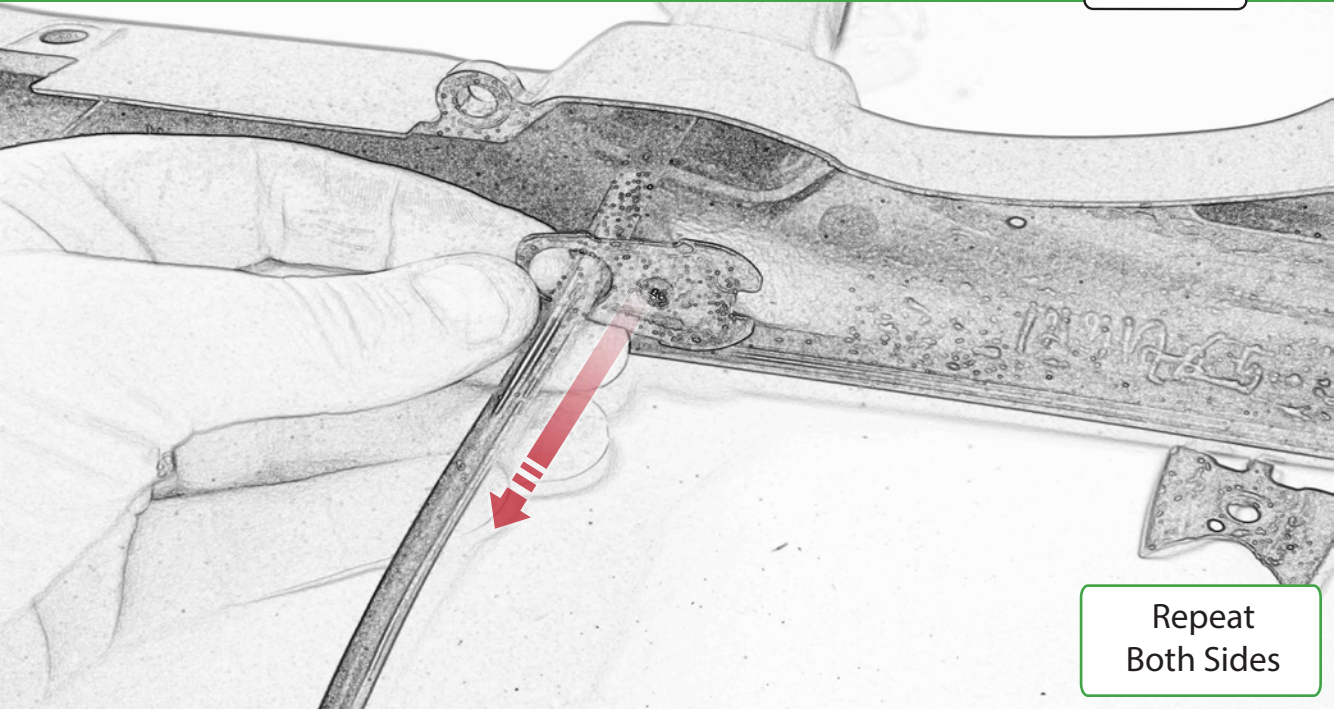


Repeat  
Both Sides

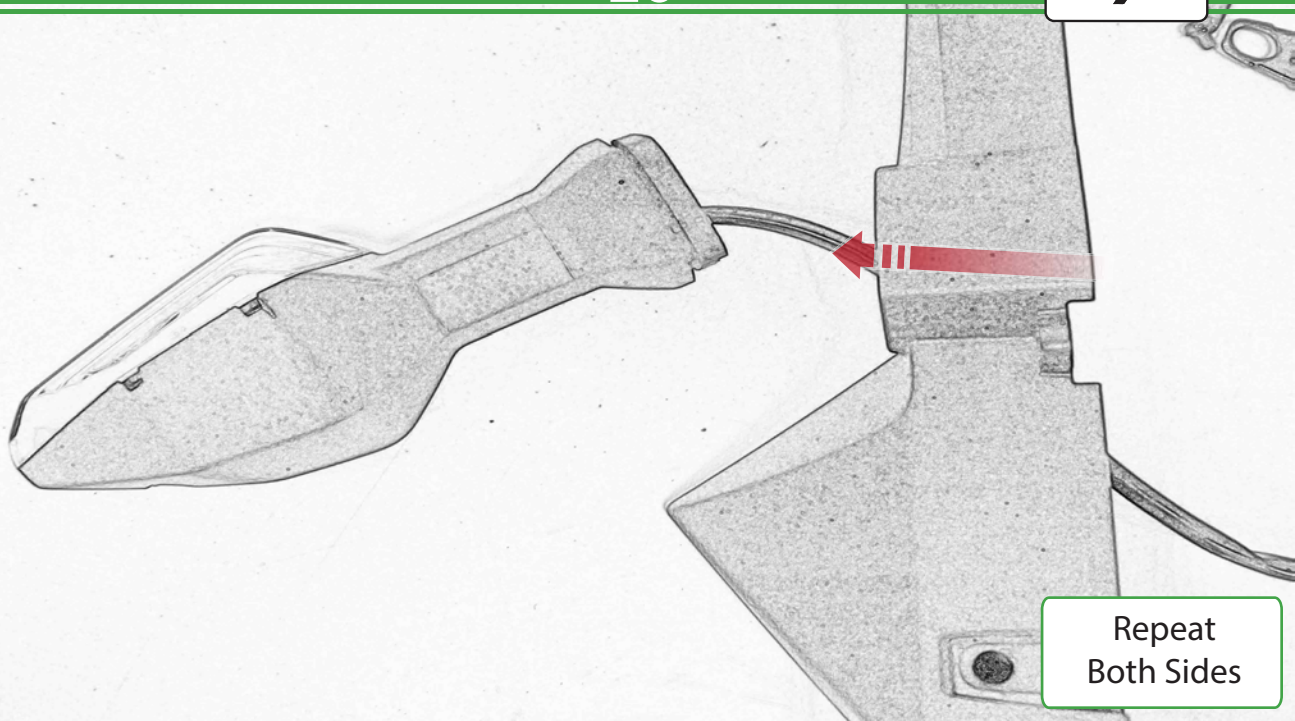


Repeat  
Both Sides

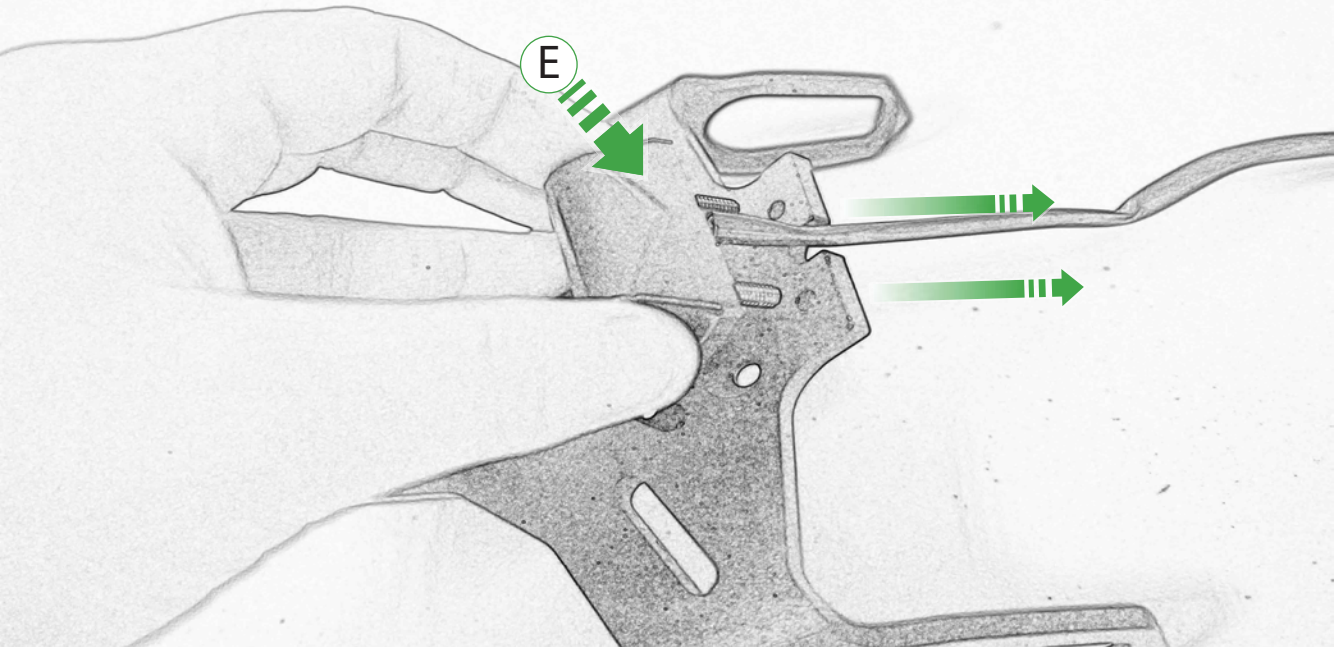


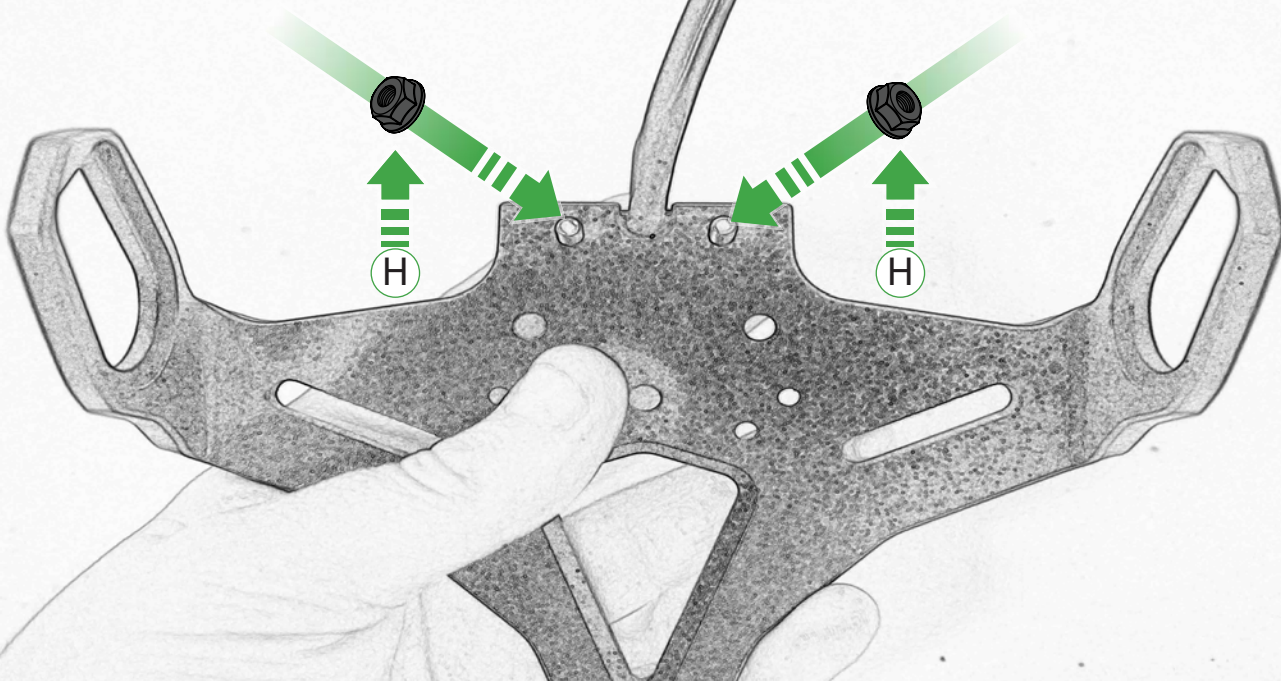



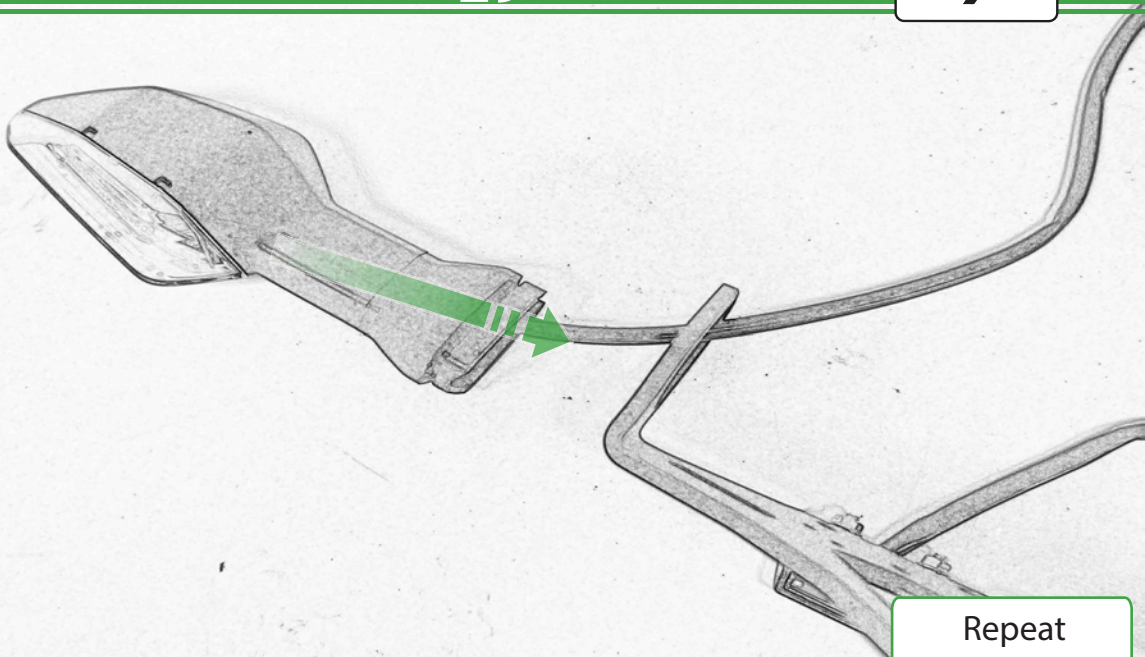


Repeat  
Both Sides

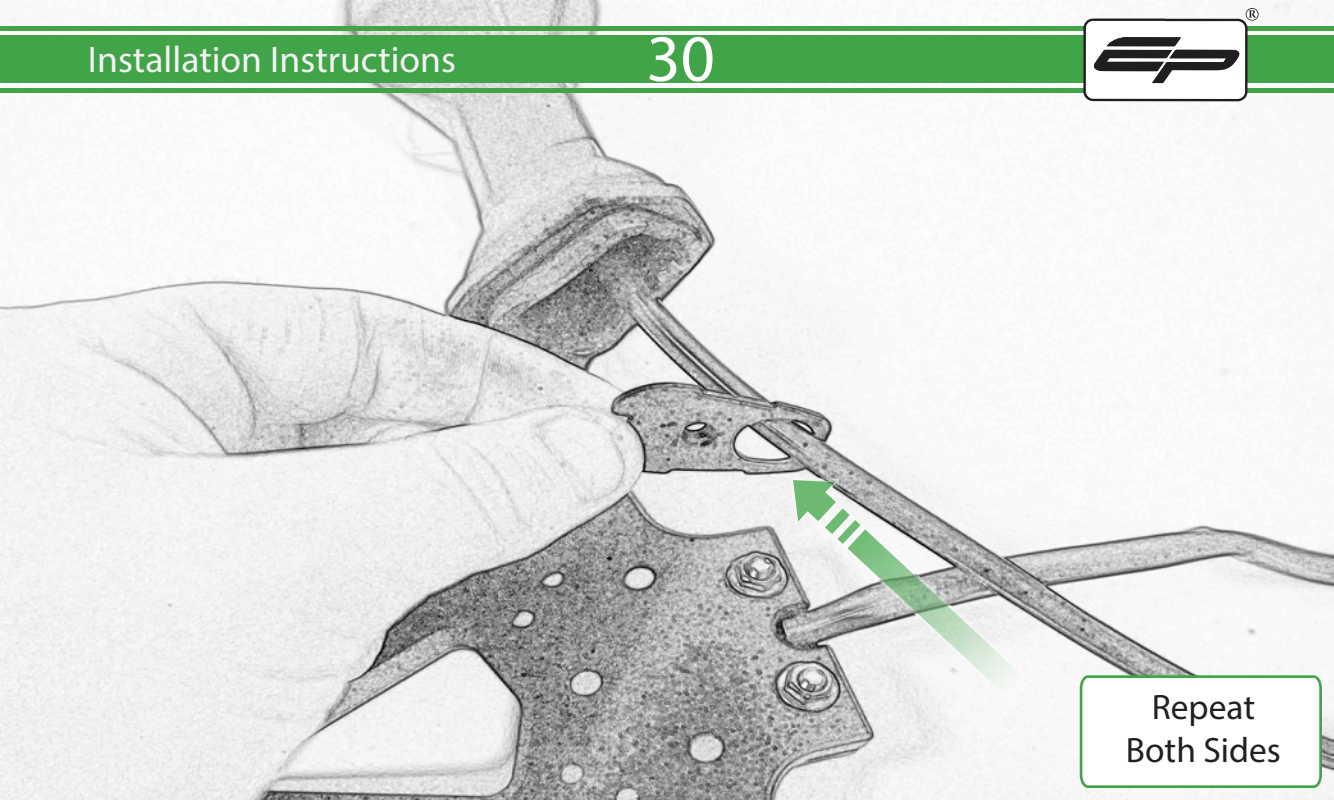


Repeat  
Both Sides

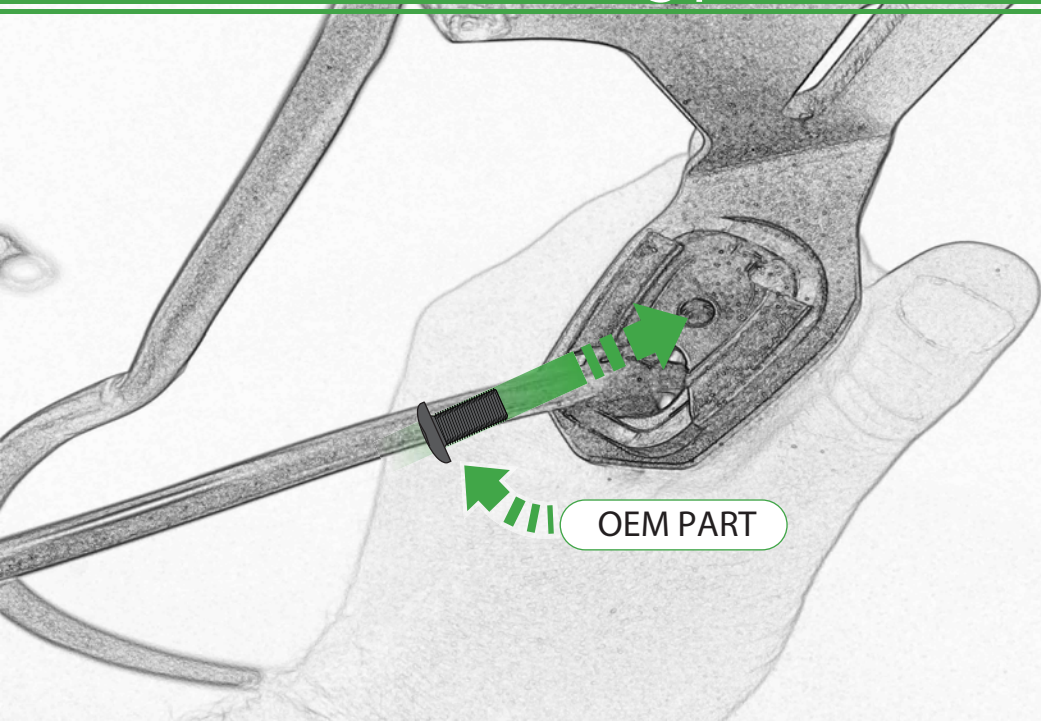


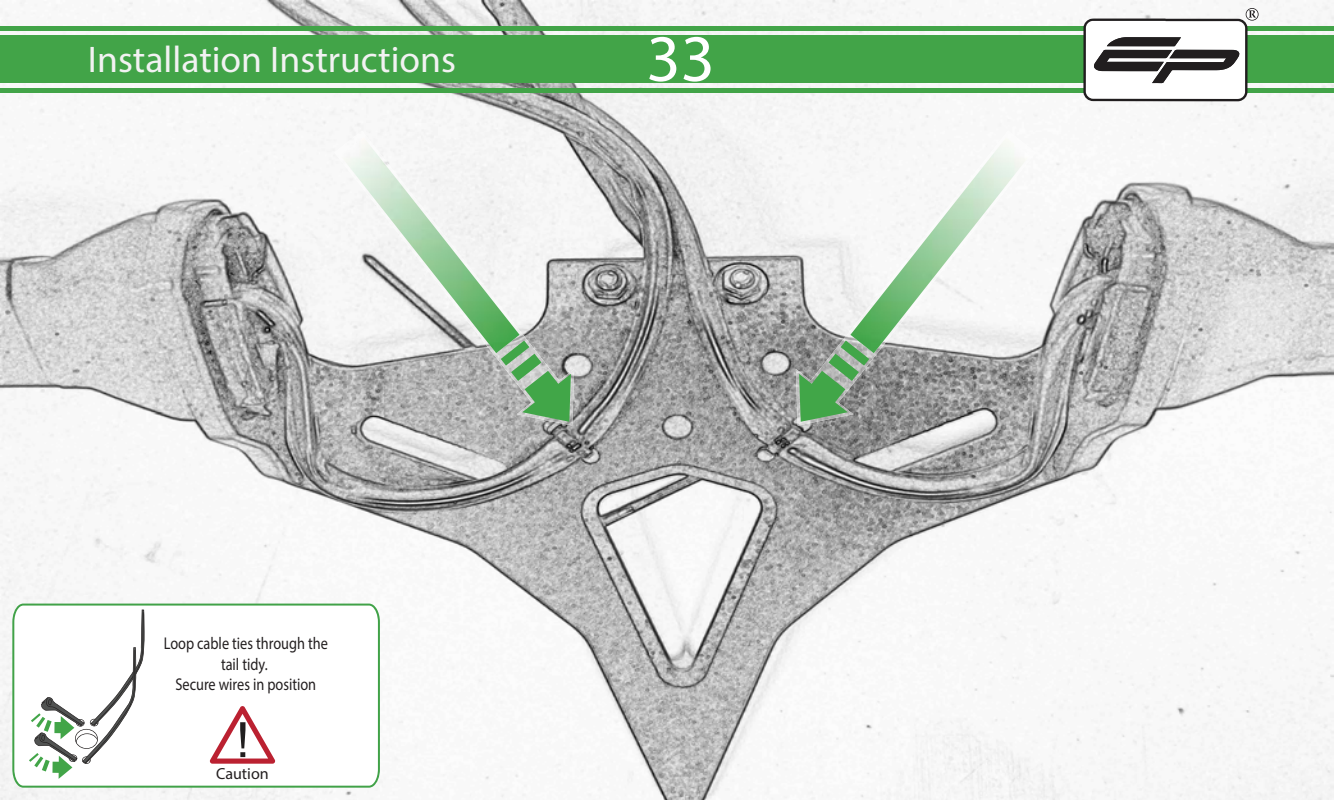


OEM PART


Repeat  
Both Sides

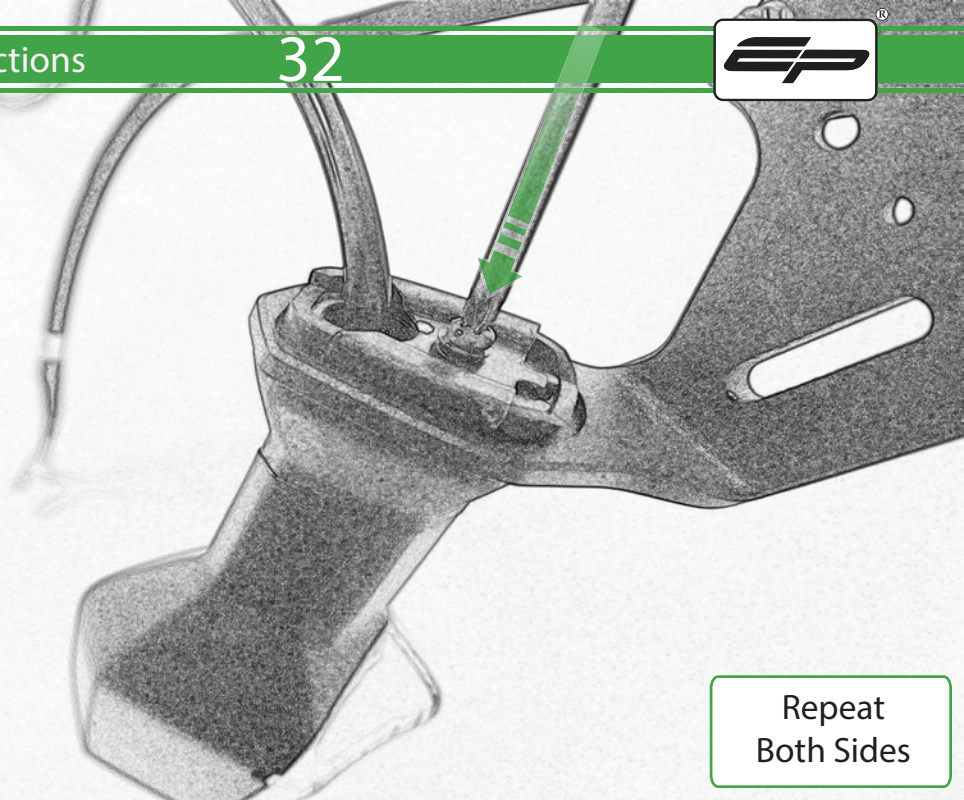



Repeat  
Both Sides



Loop cable ties through the tail tidy.  
Secure wires in position




Caution

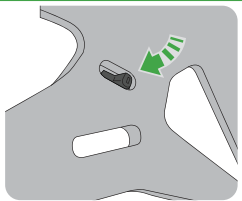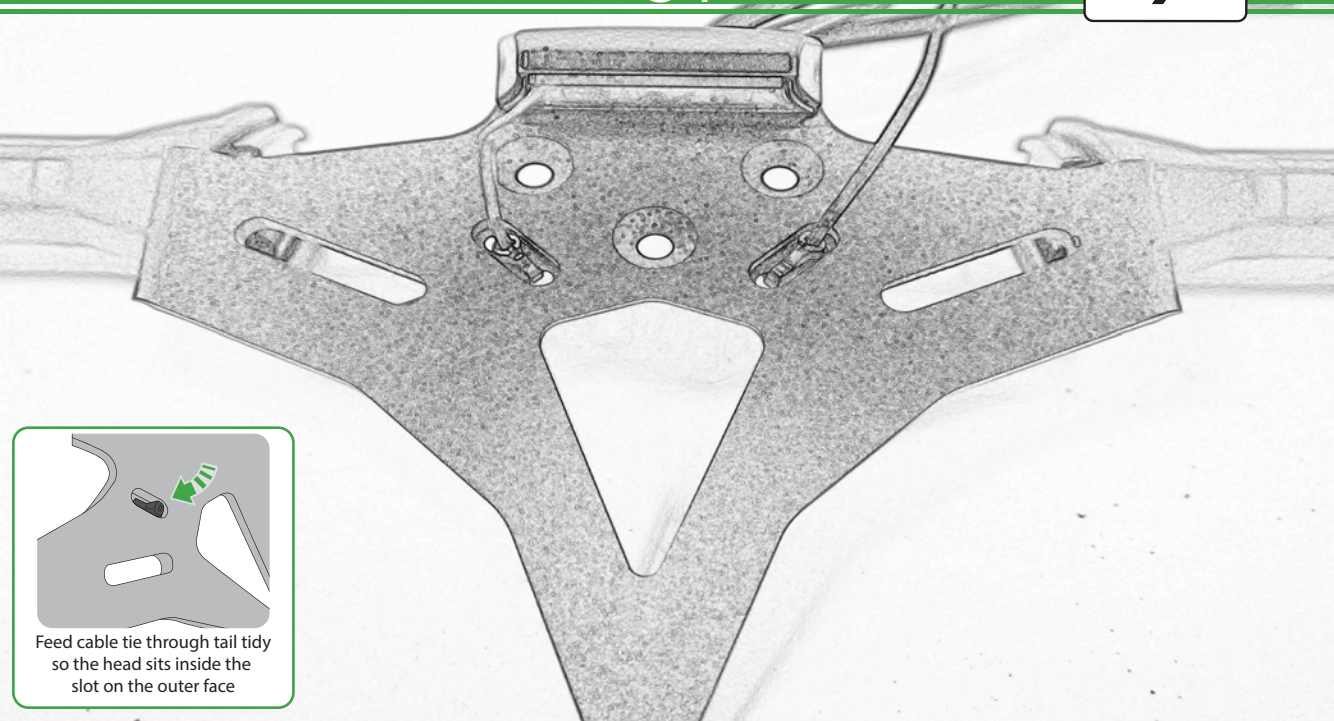

Feed cable tie through tail tidy  
so the head sits inside the  
slot on the outer face




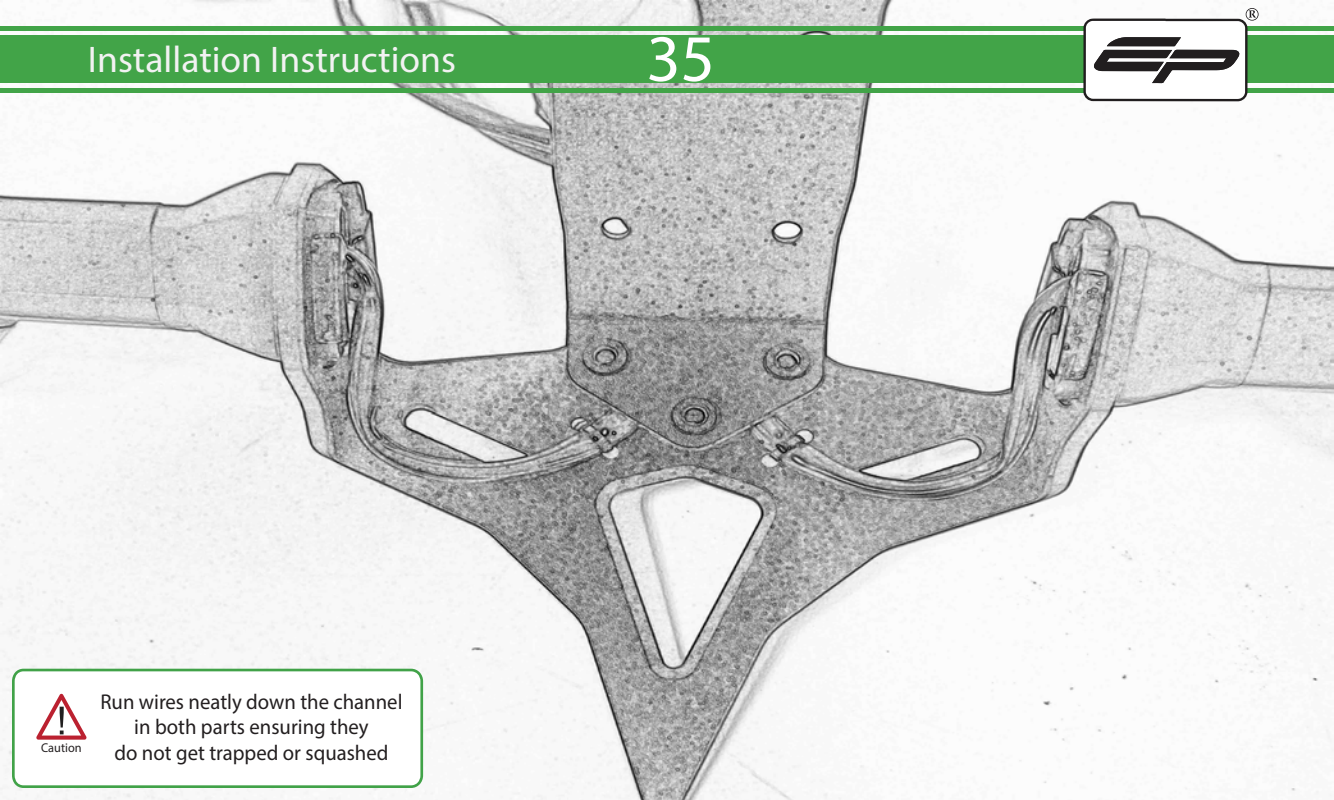


Caution

Run wires neatly down the channel in both parts ensuring they do not get trapped or squashed




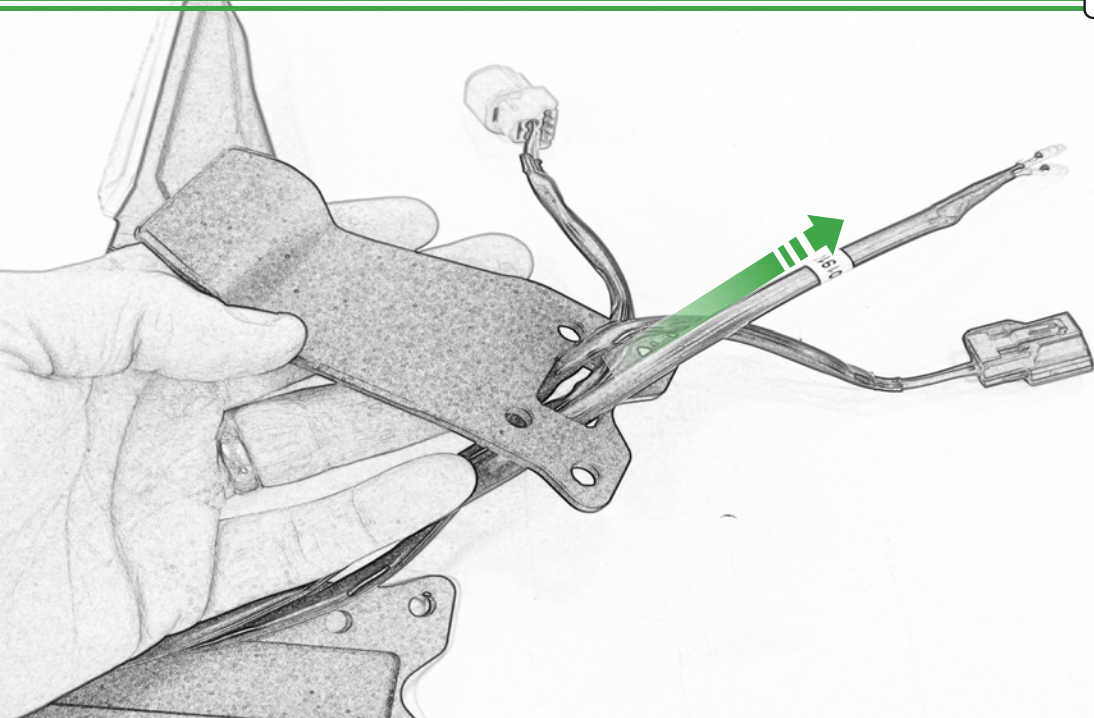


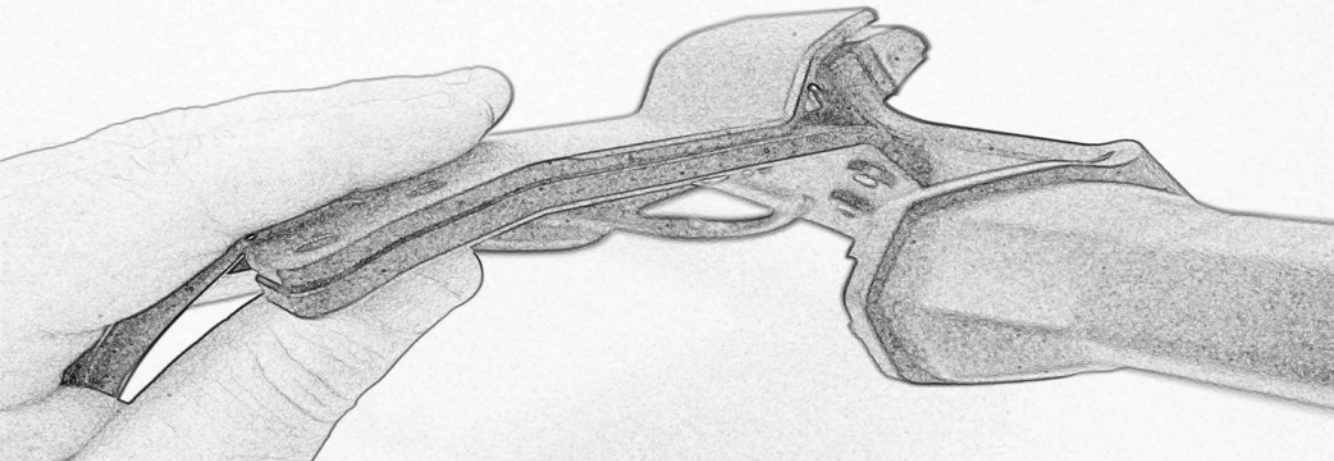


Run wires neatly down the channel  
in both parts ensuring they  
do not get trapped or squashed



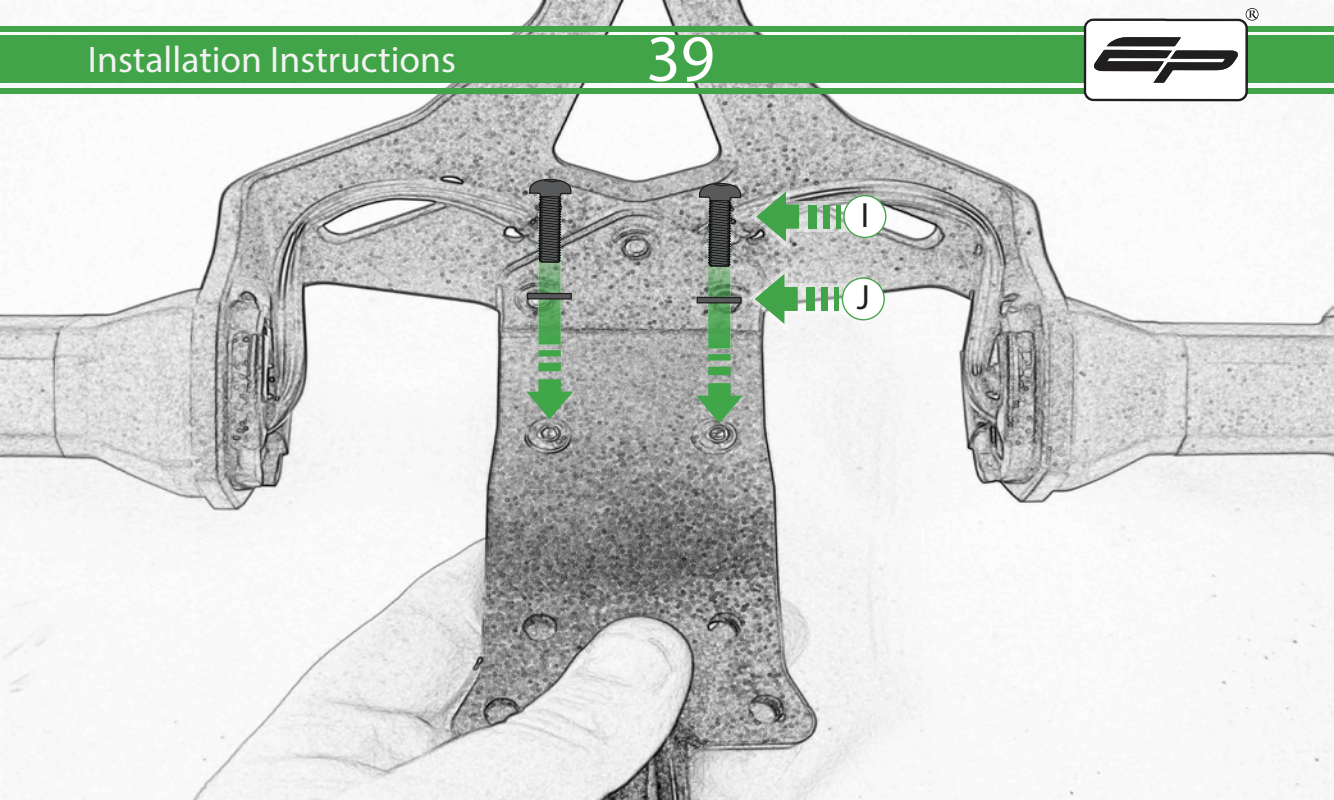


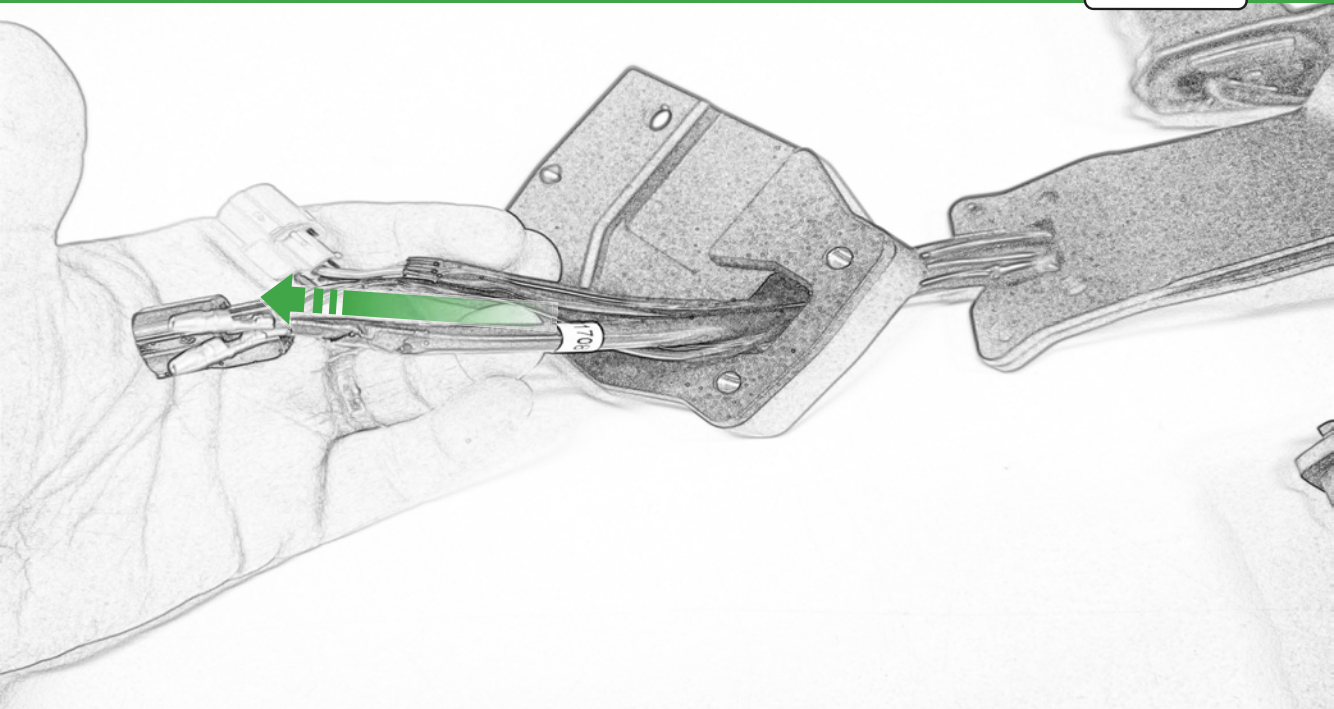


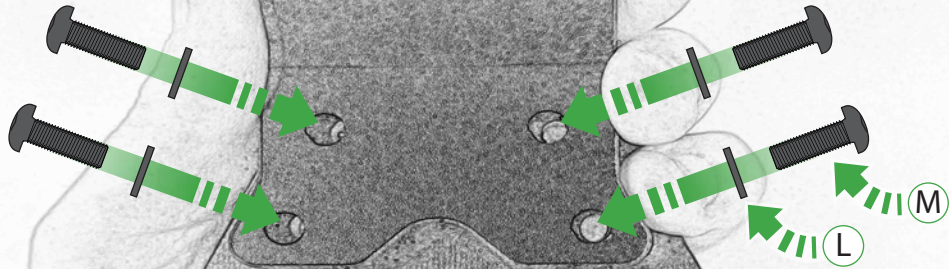






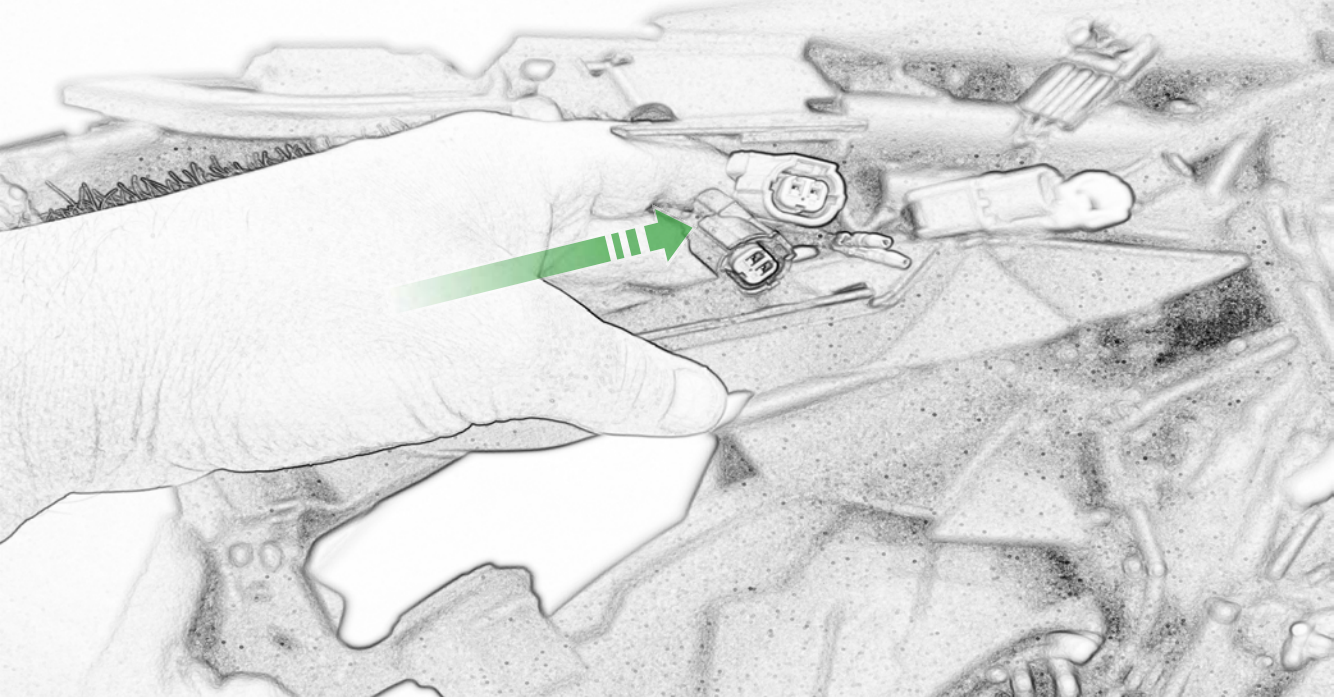


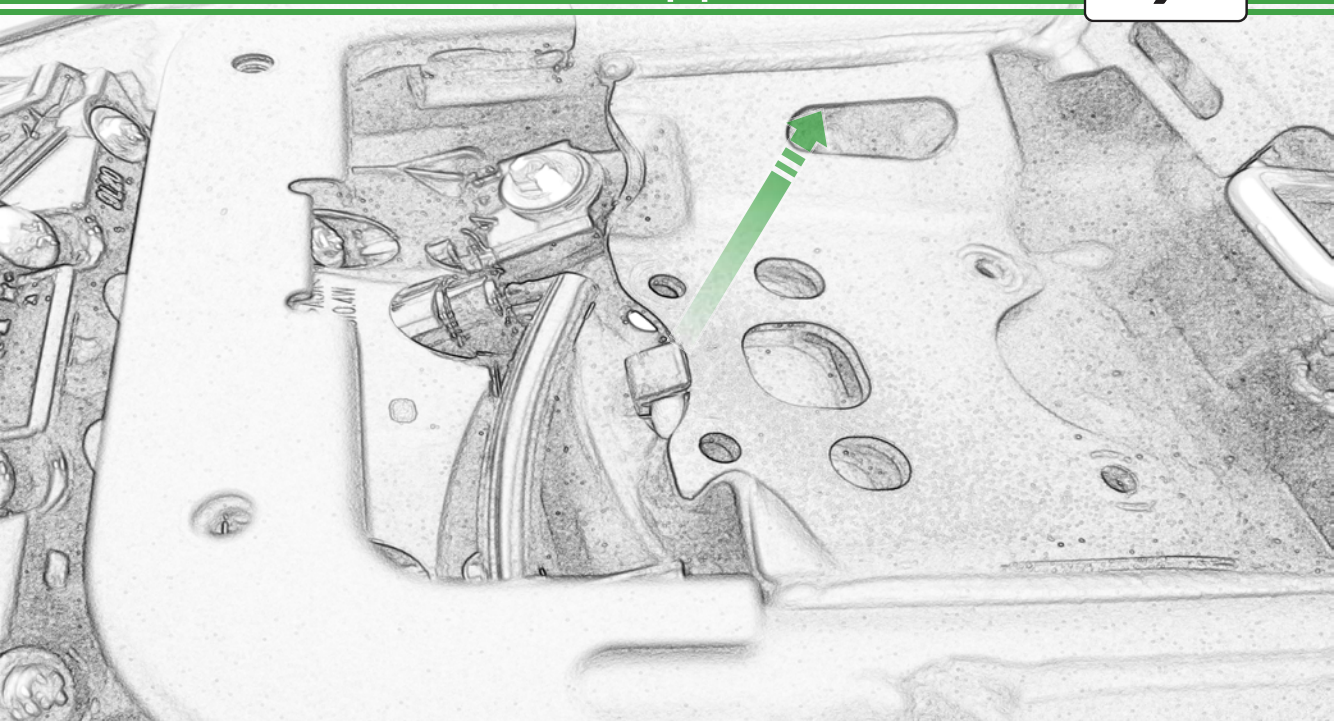


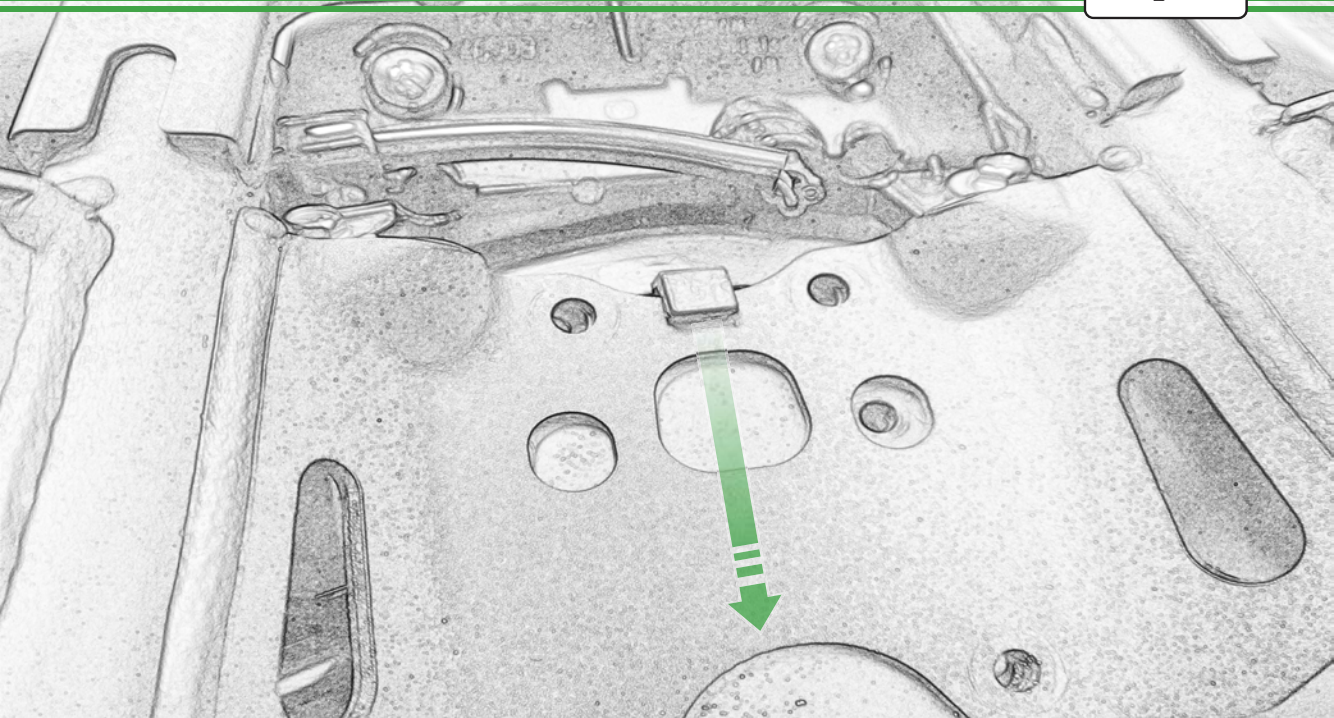








OEM PART

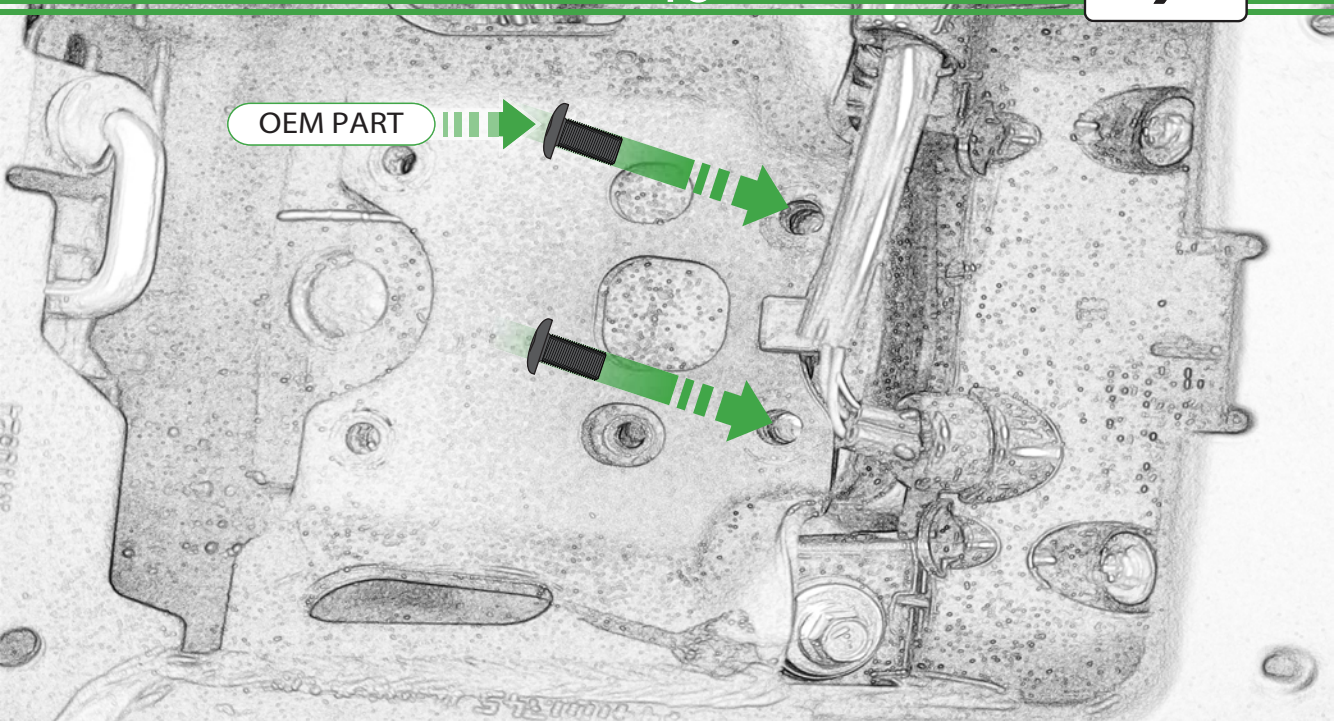
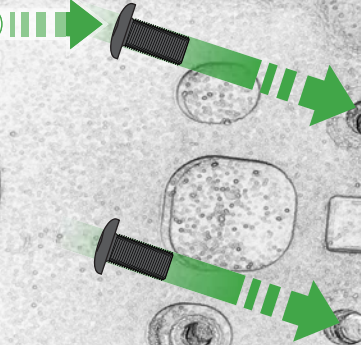







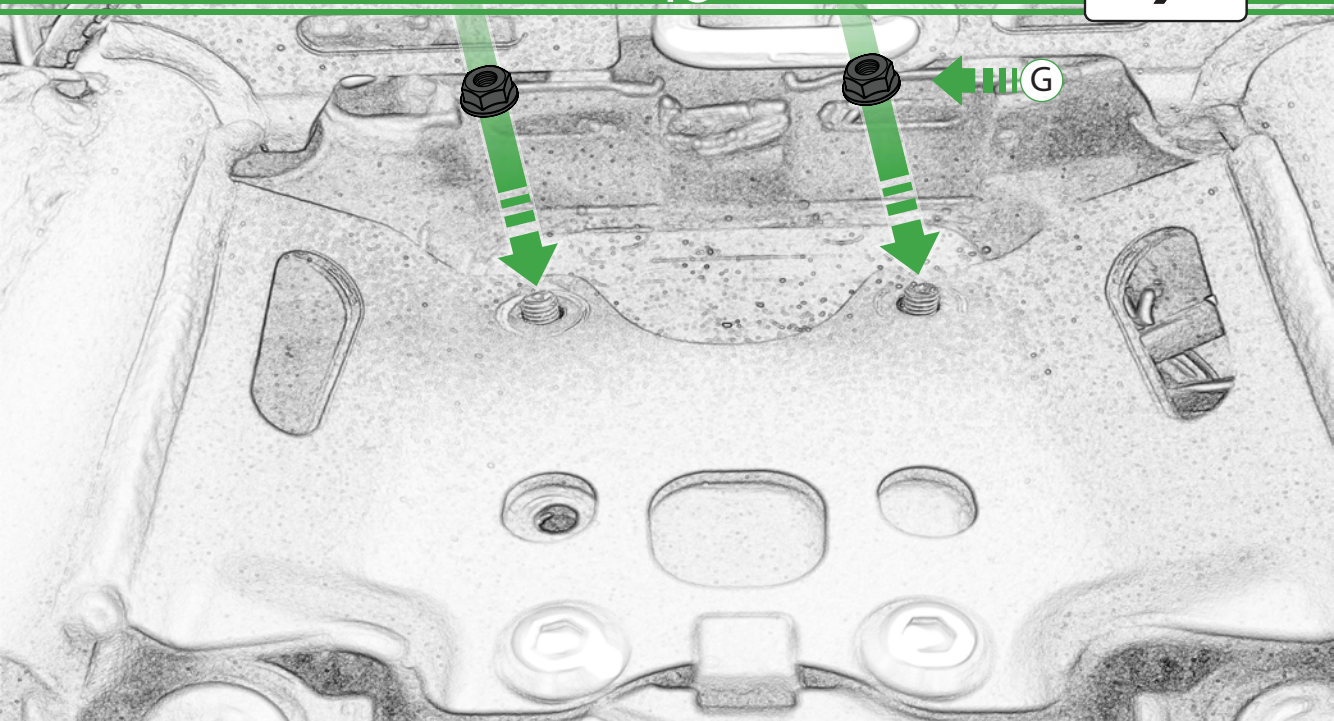


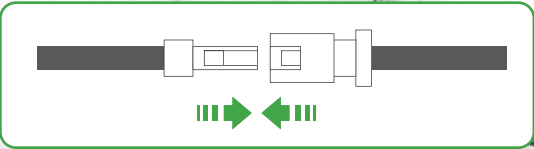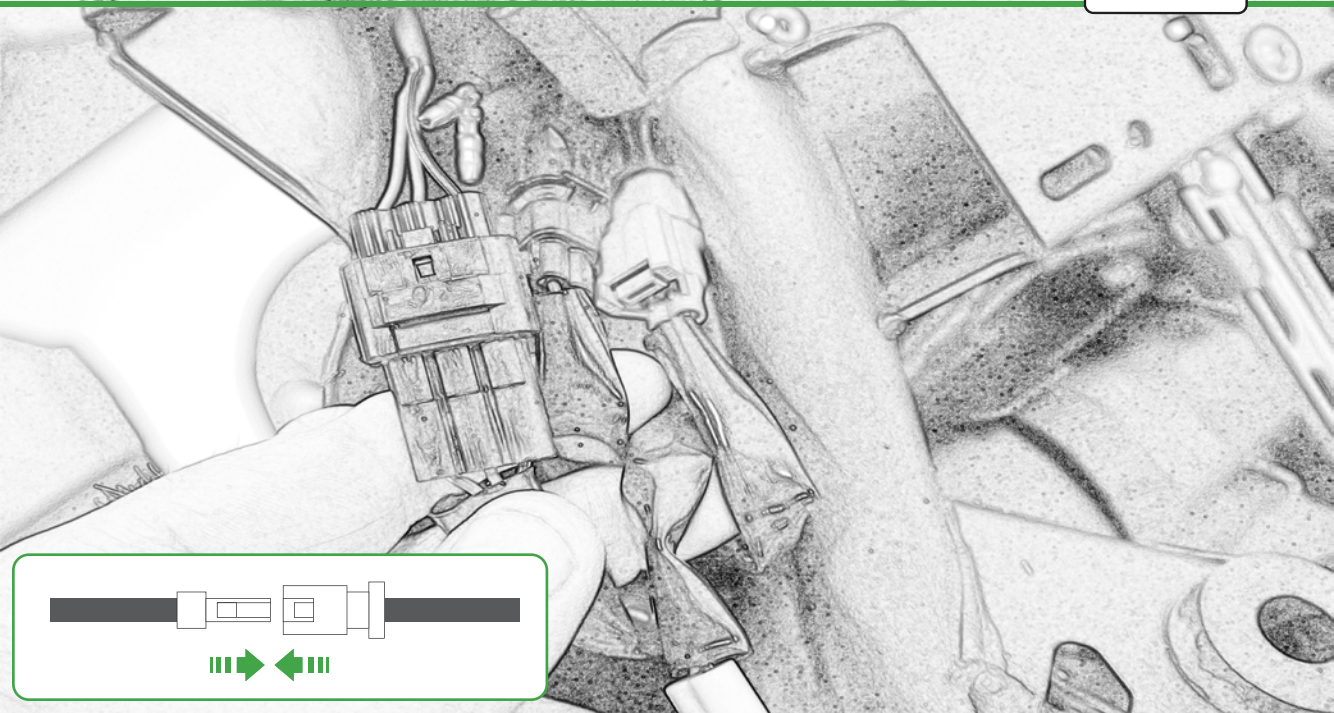

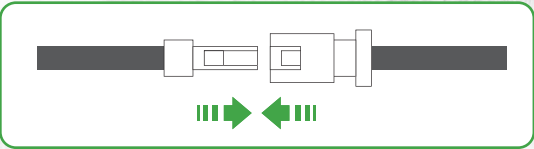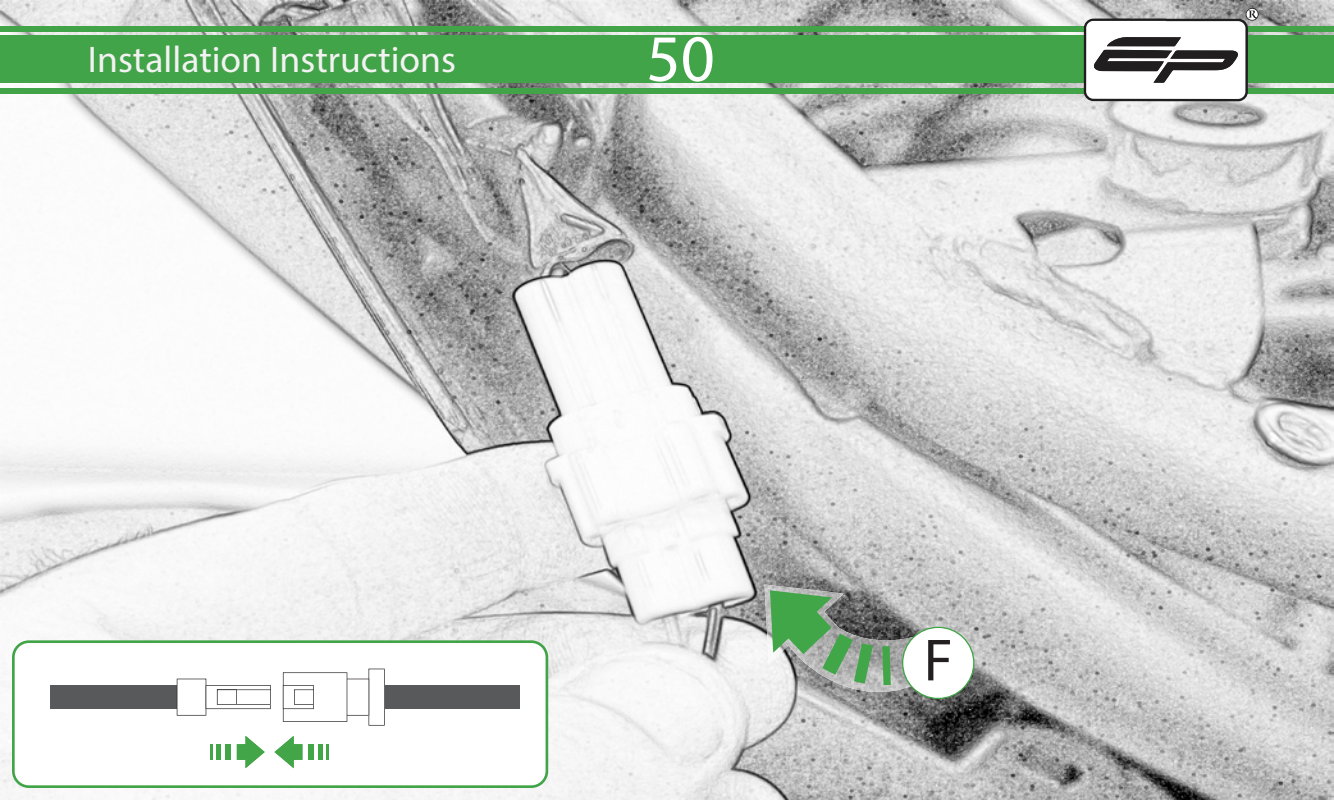



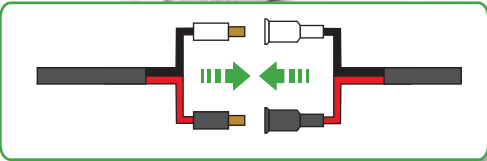

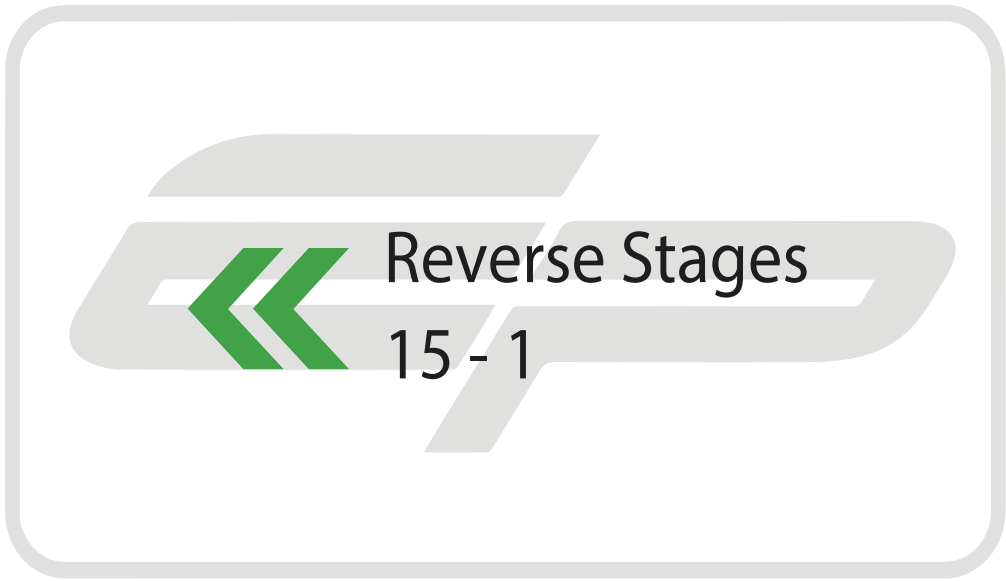



## ESSENTIAL CHECKS



After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.

It is recommended that periodic inspections are made to ensure that all fixings are fully tightend.



**EVOTECH**<sup>®</sup>  
P E R F O R M A N C E

[www.evotech-performance.com](http://www.evotech-performance.com)